

BRAUN






KF 510

KF 550



AromaPassion

Type 3104

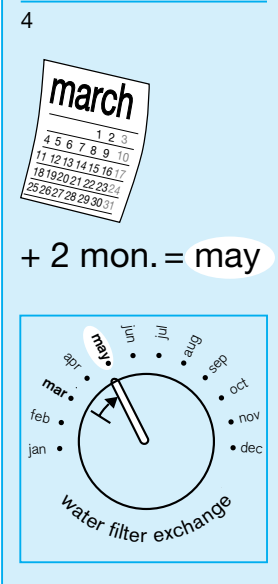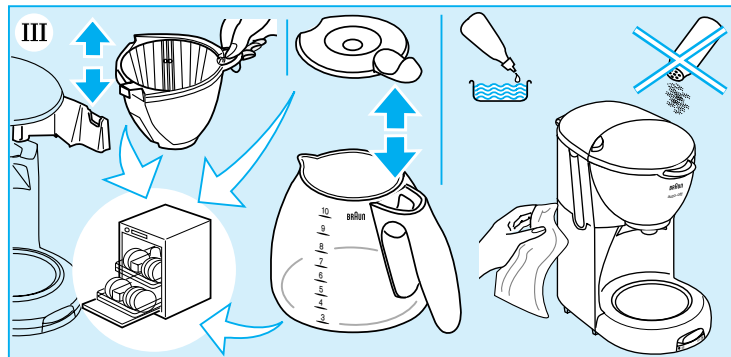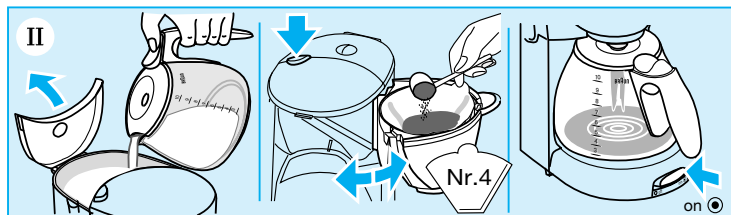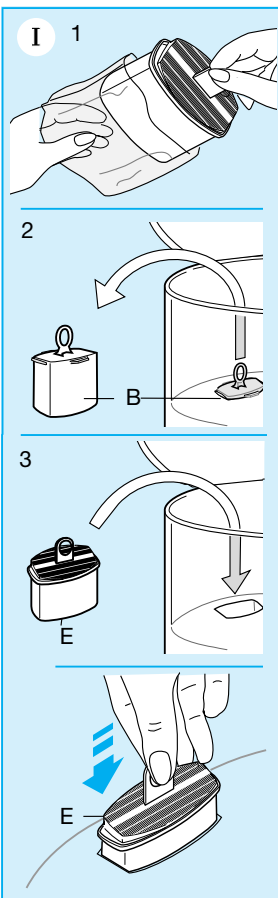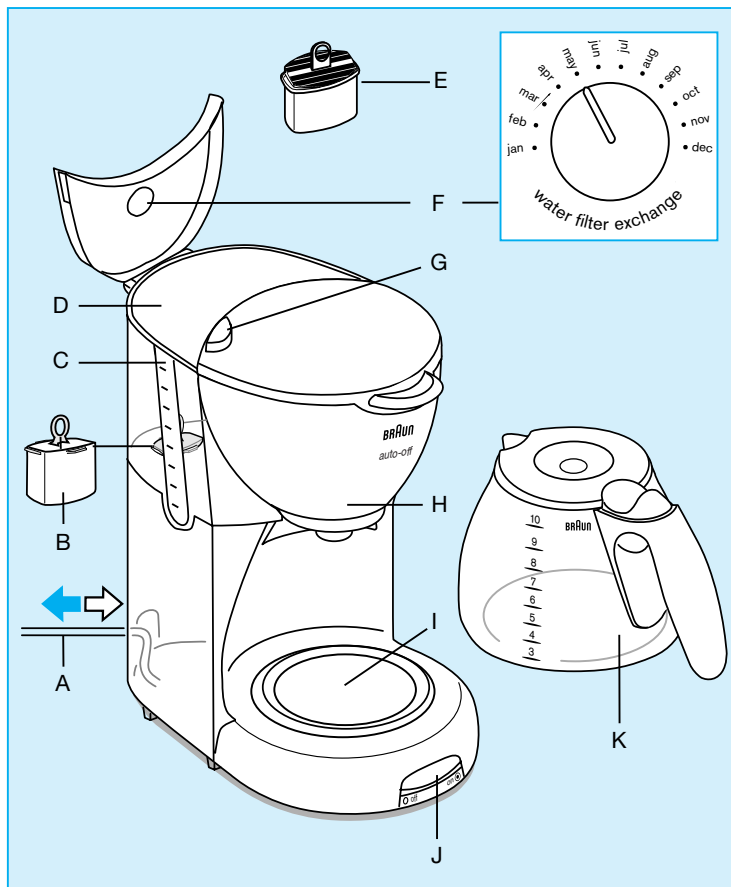

한국어

본 제품은 당사의 엄격한 기준하에 만들어진 우수한 품질과 기능 그리고 디자인을 갖춘 제품입니다.
저희 브라운 제품을 구입해 주셔서 감사합니다.

주의사항

제품을 사용하시기 전 반드시 사용설명서를 주의깊게 읽어주십시오.

- 어린이의 손이 닿지 않도록 하십시오.
- 플러그를 꽂기 전에 제품 밑면에 표시된 전압과 가정의 전압이 일치한지 확인하십시오.
- 열판과 같이 제품의 뜨거운 면을 만지지 마십시오.
코드가 열판에 닿지 않도록 주의하십시오.
- 유리 용기를 다른 뜨거운 물체(가스렌지나 난로등) 위에 올려놓지 마십시오.
- 유리 용기를 전자렌지에 사용하지 마십시오.
- 커피를 더 끓이실 경우 커피메이커가 식을 수 있도록 약 5분간 스위치를 껐다가 다시 켜십시오. 곧 바로 사용 하시면 물탱크에 찬물을 채울 때 수증기가 발생할 수 있습니다.
- 브라운 제품은 안전 기준에 적합하도록 제조되었습니다.
코드 교환을 포함한 제품의 수리는 반드시 지정된 서비스 센터에 맡기십시오. 잘못된 수리나 무자격자에 의한 수리는 사고를 유발하거나 사용자가 다칠 우려가 있습니다.
- 본 제품은 일반 가정용으로 제작되었습니다.
- 커피를 끓일 때는 반드시 찬물을 이용하십시오.

최대용량

10컵(각 125ml)

제품명세

- A. 코드/코드보관함
- B. 정수필터 자리마개
- C. 수량계
- D. 물탱크
- E. 정수필터 카트리지를
- F. 정수필터 교환지시 다이얼
- G. 커피추출용기 오픈 버튼
- H. 커피 추출 용기
- I. 열판
- J. 전원 스위치
켜짐: On = ●
꺼짐: Off = ○
- K.뚜껑 달린 커피용기

I.작동 준비

정수필터 카트리지를 장착방법

1. 정수필터 카트리지를(E)의 포장을 제거하십시오.
2. 정수필터 자리마개(B)를 물탱크에서 빼내십시오.
3. 정수필터 카트리지를 끼워 넣으십시오
(정수필터 카트리지를 사용하지 않는 경우에는 꼭 정수필터 자리마개를 물탱크 안에 끼워 놓아야 합니다).
4. 정수필터는 2개월마다 교환해 주십시오. 정수필터 교환지시 다이얼(F)을 정수필터 카트리지를 교체해야하는 달에 미리 맞추어 놓아 교체시기를 확인 할 수 있습니다.

유의사항

커피메이커를 처음 사용하거나 오랫동안 사용하지 않은 경우 또는 정수필터 카트리지를 새로 교환했을 때에는 물탱크에 깨끗한 찬물을 가득 채우고 커피를 넣지 않은 채로 한번 작동시킨 후 사용하십시오.

II. 커피 끓이는 방법

물탱크에 깨끗한 찬물을 채운 후 커피추출용기 오픈버튼(G)을 눌러 커피추출 용기를 열어 종이 필터(No.4)를 안에 끼우고 원두커피를 넣으십시오. 열판 위에 유리 용기를 올려놓고 커피메이커의 스위치를 켜십시오. 커피추출 용기를 쉽게 분리할 수 있으므로 좀 더 편리하게 원두커피를 넣거나 찌거기를 제거하실 수 있습니다. Drip stop 기능이 있어 커피를 끓이는 도중에 커피용기를 들어 올려 커피를 따르더라도 추출중인 커피가 새지 않도록 막아줍니다. 커피추출 용기 밖으로 커피가 넘치지 않도록 유리 용기를 즉시 열판 위에 다시 올려놓아주십시오.

커피 한 잔을 추출하는 시간은 약 1분이며 유리 용기 안에 추출된 커피의 양은 원두커피에 흡수된 물의 양 때문에 처음에 채웠던 물보다 적습니다.

모델KF550은 자동 전원차단 장치가 내장되어 있습니다. 작동 후 2시간이 지나면 자동으로 커피메이커의 전원이 꺼집니다.

III. 정수필터

정수필터는 물때 뿐만 아니라 염소성분 및 나쁜 맛과 냄새를 제거함으로써 커피 맛을 한결 살려줍니다. 정수필터를 정기적 (2개월에 한번)으로 교환해주시면 커피의 맛을 더 좋게 함은 물론 석회화 현상을 방지함으로써 커피메이커의 수명을 연장해 줄 수 있습니다. 브라운 정수 필터는 제품구입 장소 및 브라운 서비스센터에서 구입하실 수 있습니다.

IV. 청소

청소하기 전 반드시 전원에서 코드를 빼주십시오. 절대로 흐르는 물에 제품을 세척하거나 물에 담그지 마십시오. 반드시 젖은 헝겊을 사용하여 청소하십시오. 탈착할 수 있는 모든 부분은 식기 세척기에 사용하셔도 됩니다.

V. 석회질 제거(그림설명 없음)

경수를 사용하거나 정수필터 없이 커피메이커를 사용할 경우 정기적으로 석회질 제거를 해 주시기 바랍니다. 정수필터를 사용하여 정기적으로 교환해 줄 경우에는 통상 석회질을 제거하실 필요가 없습니다. 그러나 커피를 추출하는 시간이 평상시보다 훨씬 오래 걸릴 경우 석회질을 제거해 주시기 바랍니다.

주의: 석회질 제거를 할 때는 물탱크에 정수필터 자리마개를 끼워 넣으십시오.

- 알루미늄에 손상을 주지 않는 일반 석회질 제거제를 이용하여 석회질을 제거하실 수 있습니다.
- 석회질 제거제에 명시된 사용방법을 따르십시오.
- 물 한컵 당 커피추출시간이 정상적인 수준에 이를 때까지 여러 번 반복해서 석회질을 제거하십시오.
- 석회질 제거 후 깨끗한 물을 가득 채워 최소 2번 이상 커피메이커를 깨끗하게 세척해 주십시오.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내이라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자나 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. **(구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.)**
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

브라운 제품의 보상기준은 재정경제부고시 소비자
 피해보상규정에 따릅니다.
 A/S 문의: 1588-1588
 가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
<http://www.braun.com>
<http://www.braun.co.kr>

품질보증서		
본 제품은 철저한 품질관리와 감사를 거쳐서 제조·수입된 제품입니다. 이래 가계원 내항으로 품질을 보증합니다.		
제품명	모델명	
구입일	보증기간	구입일로부터 1년
고		판매점
적		

한국 파인텍 판매 (유)
 서울시 강남구 테헤란로 449-2
 전화 02-880-00000 팩스 02-880-00000

English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

Caution

Please read the use instructions carefully and completely before using the appliance.

- This appliance must be kept out of reach of children.
- Before plugging into a socket, check that your voltage corresponds with the voltage printed on the bottom of the appliance.
- Avoid touching hot surfaces, especially the hotplate. Never let the cord come in contact with the hotplate.
- Do not put the glass carafe on other heated surfaces (such as stove plates, hot trays, etc.).
- Do not microwave glass carafe.
- Before you start preparing a new pot of coffee, always allow the coffeemaker to cool down for approx. 5 minutes (switch off the appliance), otherwise steam can develop when filling the water tank with cold water.
- Braun electric appliances meet applicable safety standards. Repairs on electric appliances (including cord replacement) must only be carried out by authorized service centres. Faulty, unqualified repair work may cause accidents or injury to the user.
- This appliance was constructed to process normal household quantities.
- Always use cold water to make coffee.

Maximum cups

10 cups (125 ml each)

Description

- Ⓐ Cord/cord storage
- Ⓑ Space compensator
- Ⓒ Water level indicator
- Ⓓ Water tank
- Ⓔ Water filter cartridge
- Ⓕ Water filter exchange dial
- Ⓖ Swing-filter push button
- Ⓗ Filter basket with drip stop
- Ⓘ Hotplate
- Ⓢ On/off switch
 - On = ☉
 - Off = ○
- Ⓚ Carafe with aroma seal lid

I Setting into operation

Installing the water filter cartridge

1. Unpack the water filter cartridge (Ⓔ).
2. Remove the space compensator (Ⓑ) from the water tank.
3. Insert the water filter cartridge. (Be certain to keep the space compensator as it must be installed in the water tank whenever the water filter cartridge is removed.)
4. The water filter should be exchanged every two months. To remind you, set the dial (Ⓕ) to the month that the water filter should be replaced.

N.B.

Before using the coffeemaker for the first time, after a long period of not using it, or after installing a new water filter cartridge, run the coffeemaker through one brewing cycle using the maximum amount of cold, fresh water without any ground coffee.

II Making coffee

Fill tank with cold, fresh water, press filter push button (Ⓖ) to open filter basket, insert a No. 4 paper filter, put in ground coffee, place the carafe on the hotplate and switch on the coffeemaker. For more convenience when filling with or disposing of ground coffee, the filter basket can be easily taken off its hinge. A drip-stop prevents dripping when the carafe is removed to pour a cup before brewing is finished. Carafe should be immediately returned to hotplate to prevent the filter basket from overflowing.

Brewing time per cup: approx. 1 minute. Amount of brewed coffee in the carafe will be below initial filling level as water is retained by ground coffee.

Model KF 550 is equipped with an automatic shut-off feature (auto-off). After two hours of operation the coffeemaker will automatically switch off.

III Water filter

The water filter improves coffee flavor by removing chlorine, bad tastes and odors as well as scale. If the cartridge is replaced regularly (every two months), it provides not only better tasting coffee, but also can extend the life of your coffeemaker by preventing calcification. Braun water filters are available at your retailer or Braun service centre.

IV Cleaning

Always unplug the appliance before cleaning. Never clean the appliance under running water, nor immerse it in water; only clean it with a damp cloth. All removable parts are dishwasher-safe.

V Decalcifying (without illustrations)

If you have hard water and you use your coffeemaker without a water filter, it has to be decalcified regularly. When using the water filter cartridge and exchanging it regularly, you normally will not need to decalcify. However, if your coffeemaker takes much longer than usual to brew, it should be decalcified.

Important: Replace water filter with the space compensator during any decalcification procedure.

- You can use a commercially available decalcifying agent, which does not affect aluminum.
- Follow the instructions of the manufacturer of the decalcifying agent.
- Repeat the procedure as many times as necessary in order to reduce the brewing time per cup to a normal level.
- Allow the maximum amount of fresh cold water to run through at least twice to clean the coffeemaker.

Best practices for best results

This coffeemaker is designed to deliver maximum coffee aroma. Therefore, Braun recommends:

- Use only fresh ground coffee.
- Store ground coffee in a cool, dry and dark place (e.g., refrigerator) in an airtight container.
- Use only Braun water filters and exchange every two months with regular use.
- Clean and decalcify coffeemaker regularly as described in parts IV and V.

Subject to change without notice

Guarantee

We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany