

BRAUN








Sommelier

WK 600



Type 3214

www.braun.com

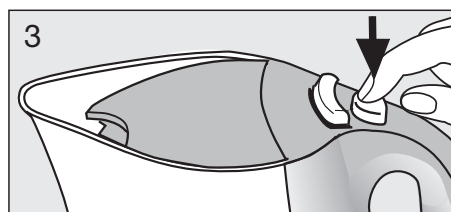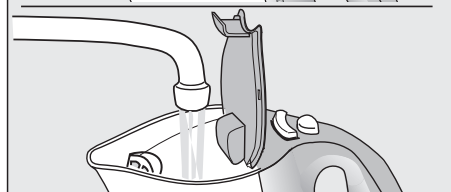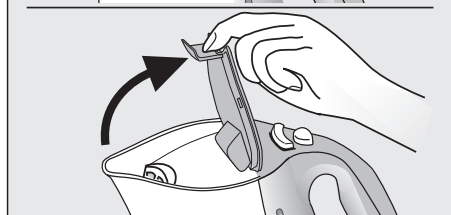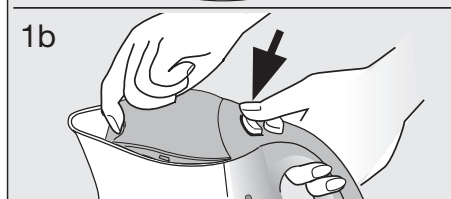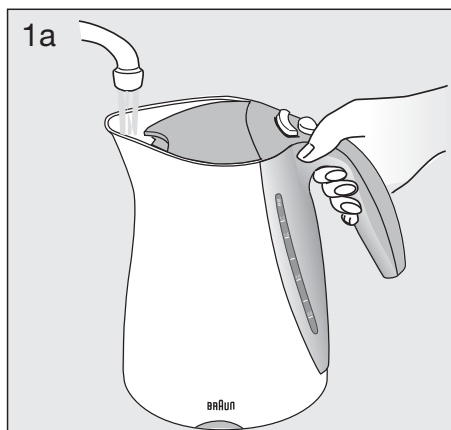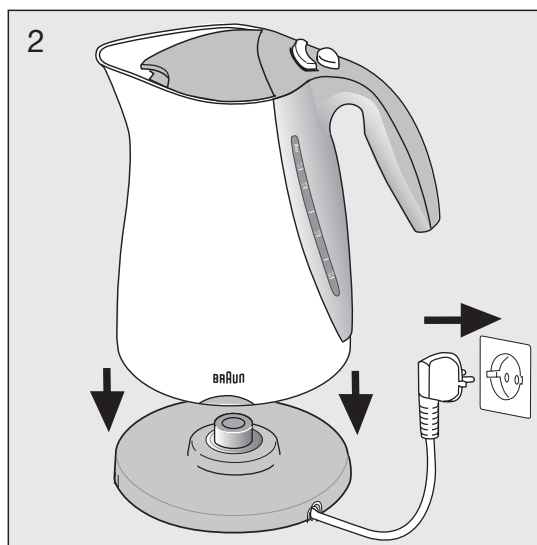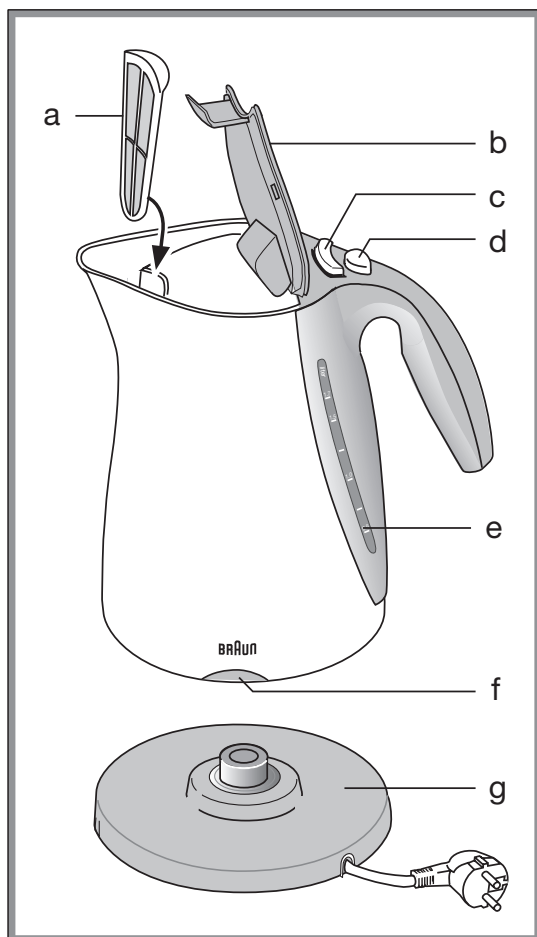

한국어

브라운 소몰리에 전기주전자를 구입하여 주셔서 감사합니다. 본 제품의 디자인 및 급속가열 기능에 오래도록 만족하시기를 바랍니다. 본 제품을 사용하기 전에 사용설명서를 주의 깊게 읽어주시기 바라며, 제품을 사용하는 기간 동안 사용설명서를 잘 보관 하십시오.

중요사항

- 전원을 연결하기 전에 제품 바닥에 표시된 전압과 사용 전압이 일치하는지 확인하여 주십시오. 제공된 받침대(g)에서만 작동시키십시오.
- 일반 가정용으로 제조되었습니다.
- 물을 끓이는 용도로만 사용하기 바랍니다.
- 물기가 없고 평평하며 고정된 표면에서 사용하십시오.
- 전기 코드가 제품 상단에 닿지 않도록 주의하십시오. 코드선의 길이는 받침대 밑에 감아 짧게 줄여 놓을 수 있습니다.
- 어린이의 손이 닿지 않는 곳에 보관하여 주십시오.
- 주의: 화상의 위험이 있으므로, 가열 시 또는 가열 후 제품의 뜨거운 표면을 만지지 마십시오. 반드시 주전자 손잡이를 잡아서 옮기시기 바랍니다. 끓는 물이 밖으로 흐르지 않도록 주전자는 수직으로 똑바르게 잡아주십시오.
- 받침대, 주전자, 코드선은 절대로 뜨거운 물체(예: 난로 표면)에 닿지 않도록 주의하십시오.
- 빈 주전자에 전원이 들어와 있을 경우에는 과열방지장치가 자동적으로 전원을 차단합니다. 이런 경우, 물을 채우기 전에 약 10분간 주전자의 열을 식혀주십시오.
- 주의: 주전자에 물을 너무 많이 넣지 마십시오. 물이 끓어 넘쳐 화상을 입을 수 있습니다.
- 물이 끓는 동안 뚜껑을 열지 마십시오.
- 정기적으로 전기 코드를 점검하여 주시기 바랍니다.
- 제품에 이상이 생겼을 경우 사용을 중지하시고 브라운 지정 서비스센터에 수리를 의뢰하십시오. 잘못된 수리나 무자격자에 의한 수리는 사고를 유발하거나 사용자가 다칠 우려가 있습니다.
- 브라운 전기제품은 안전 기준을 통과하였습니다.

부분 명칭

- A 스케일 필터 (분리가능)
- B 뚜껑
- C 뚜껑분리버튼
- D On/off 스위치
- E 수위표시기
- F 표시등
- G 코드선보관 겸용 받침대

최대 용량 : 물 1.7리터

최초 사용 전

제품을 처음 사용하기 전, 주전자에 최대용량까지 물을 채우고 2번 반복하여 끓여 주십시오. 매번 끓인 후 주전자를 비워주십시오

사용 방법

- 1a 뚜껑을 닫은 채로 주전자의 입구를 통해 물을 채우거나,
- 1b 뚜껑분리버튼(c)을 눌러 뚜껑을 열어 물을 채운 후 다시 뚜껑을 닫아주십시오(안전장치가 내장되어 뚜껑이 열려 있으면 작동되지 않습니다).
- 2 받침대에 물기가 없는 것을 확인하고 주전자를 올려 놓은 후 전원을 연결하십시오.
- 3 On/off스위치(d)를 누르면 표시등이 켜집니다(가열하는 동안 뚜껑을 열지 마십시오).
- 4 물이 다 끓으면 자동으로 전원이 꺼집니다. 가열하는 동안에도 On/off스위치(d)를 눌러 가열을 중지시킬 수 있습니다.

자동전원차단기능

- 다음과 같은 경우에 자동으로 주전자의 스위치가 꺼집니다.
- 물이 다 끓은 경우
 - 물이 없는 경우 (실수로 전원이 켜진 경우),
 - 뚜껑이 열린 경우,
 - 받침대에서 분리된 경우

스케일 필터가 설치되어 있지 않을 경우에는 자동전원차단이 오래 걸립니다.

청소

- 청소하기 전에 반드시 전원을 차단시키고 주전자의 열이 식을 때까지 기다려주십시오.
- 제품을 흐르는 물에 닦거나 물에 담그지 마십시오. 주전자의 외부는 젖은 헝겊으로 닦아주십시오. 소량의 식기 세척용 세제를 사용하실 수 있습니다. 절대 철수세미나 연마제는 사용하지 마십시오. 알코올, 가솔린,벤젠과 같은 화학 약품은 사용하지 마십시오.
- 분리가 가능한 스케일 필터는 부드러운 솔로 청소하십시오. 절대 철수세미를 사용하지 마십시오. 식기세척기에 넣어 세척 하실 수 있습니다.

물때 제거

- 주전자의 사용 수명을 늘리기 위해서, 정기적으로 주전자 내부의 물때를 제거해주십시오.
- 주전자에 물을 0.8리터 채우고 끓이십시오.
- 중요사항 : 스위치를 끄고 물에 가정용 식초0.4리터 (4~5%산성)를 넣으십시오. 끓여 넘쳐 화상의 우려가 있으므로 절대 끓이지 마십시오.
- 식초물을 하루밤 동안 그대로 놓아두십시오.
- 주전자를 비우고 깨끗한 물로 내부를 헹구어 주십시오. 물을 채워 끓이십시오.
- 다시 한 번 주전자를 비우고 깨끗한 물로 헹구어 주십시오.
- 여전히 주전자에 물때가 남아 있으면 위의 제거방법을 다시 반복하십시오.
- 스케일필터는 희석식초에 담가 두어 물때를 제거하십시오.

상기 사항은 예고 없이 변경될 수 있습니다.

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내이라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 제품이나 부품이 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자나 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. **(구입시 영수증을 잘 보관하십시오)**
- 애프터 서비스 시 불이익이 없도록 하십시오.)
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

브라운제품:
전국 유명 백화점, 할인점, 오픈점 및 전자상가에서 구입할 수 있습니다.
<http://www.braun.com>
<http://www.braun.co.kr>

4

English

Thank you for purchasing a Braun water kettle. We hope that the design and the rapid boil feature give you many years of pleasure.

Before first use, read the use instructions carefully and keep them for future reference.

Important

- Before plugging into a socket, make sure that your voltage corresponds to the voltage printed on the bottom of the kettle. The kettle may only be operated on the base (g) supplied.
- This appliance is intended for household use only.
- **Only** use the kettle to heat water.
- Only operate the kettle on a dry, flat and fixed surface.
- Never let the cord hang down from the worktop. Winding it up with the cord storage facility may reduce the cord length.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
- **Caution:** During and after operation, never touch the metal surfaces of the kettle as they will get hot and may cause burns and scalds. Only use the handle to carry it. Always hold the kettle in an upright position, to avoid boiling water come out.
- The base, the kettle or the cord must never get in contact with hot surfaces (e. g. stove plates).
- In case the empty kettle is switched on accidentally, the overheating protection will cut it off automatically. In this case, allow the kettle 10 minutes to cool down before filling it with water.
- **Caution:** Do not overfill the kettle! Water could boil over causing scalds.
- Do not open the lid while water is boiling.
- Check the cord regularly for possible damage.
- If the appliance shows any defect, stop using it and take it to a Braun Service Centre for repair. Faulty or unqualified repair work may cause accidents or injury to the user.
- Braun electric appliances meet applicable safety standards.

Description

- a Scale filter (removable)
- b Lid
- c Lid release button
- d On/off switch
- e Water level indicator
- f Pilot light
- g Base with cord storage

Max. capacity: 1.7 l water

Before first use

Before using the kettle for the first time, fill it up twice with water to the maximum level and bring it to boil. Empty the kettle after boiling each time.

Setting into operation

- 1a Fill the kettle through the spout with the lid closed, or:
- 1b Press the lid release button (c), open the lid, fill with water and close the lid again (due to safety reasons the kettle will not work with the lid open).
- 2 Place the kettle on the dry base and plug in the base.
- 3 Press the on/off switch (d), the pilot light will come on (do not open the lid when the kettle is switched on).
- 4 When the water has boiled, the kettle automatically switches off.
You may also stop the heating procedure at any time by pressing the on/off switch (d).

Automatic cut-off feature

The kettle switches off when ...

- the water has boiled,
- it contains no water (in case of accidental switching on),
- the lid is opened,
- it is taken off the base.

If the scale filter is not installed, the automatic cut-off will be delayed.

Cleaning

- Always unplug the appliance and allow cooling down before cleaning.
- Never clean the appliance under running water, nor immerse it in water. Clean the exterior surfaces of the kettle with a damp cloth only. Small amounts of dish-washing liquids may be used. Do not use steel wool or abrasive cleaners. Never use any solvents such as alcohol, gasoline or benzene.
- The removable scale filter can be cleaned with a soft brush; do not use a metal brush. The scale filter is dishwasher-proof.

Descaling

- In order to extend the lifetime of the kettle, it should be descaled regularly.
- Boil 0.8 l water in the kettle.
- Important: Switch off the kettle and add 0.4 l household vinegar (4-5% acid). Do not boil the contents as it may cause spilling being a danger of scalding.
- Let the mix of water and vinegar sit in the kettle overnight.
- Empty the kettle and rinse the inside thoroughly with fresh water. Fill the kettle with fresh water and boil it.
- Empty the kettle and rinse it again with fresh water.
- If the kettle still contains scale, repeat this procedure.
- To remove any scale from the scale filter, you may soak it in diluted vinegar.

Subject to change without notice.

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at Braun Service Centre or at appropriate collection points provided in your country.



Internet:
www.braun.com
www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg / Germany

99588720/VII-10
Korea/GB