

BRAUN

TexStyle 1



Type 12710000, 12710001






Register your product
www.braunhousehold.com/register

TS 1
스팀 다리미
Steam Iron


한국어 7

English 9


© Copyright 2023. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

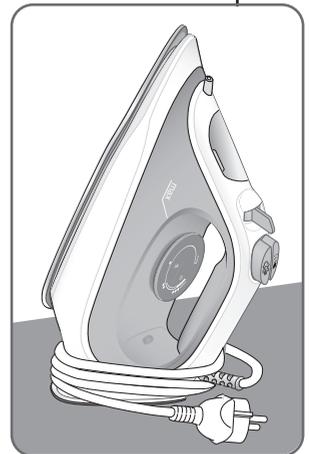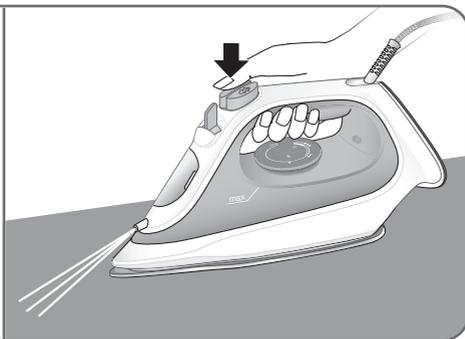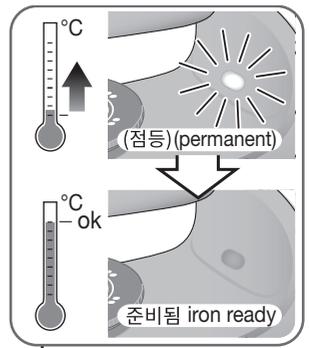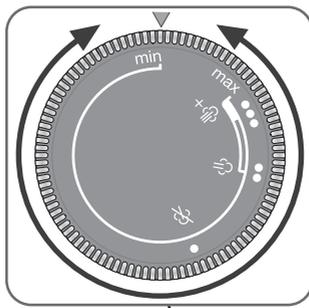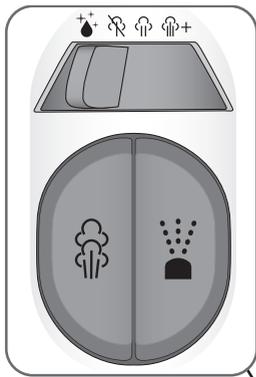


처음 사용시 Start into operation

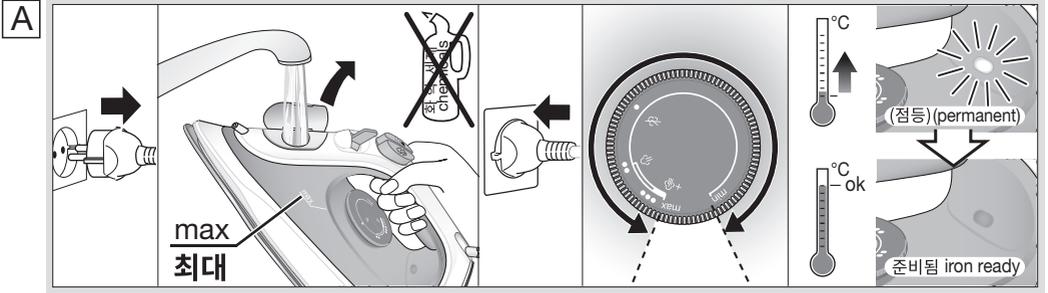


스팀사용 Steam settings

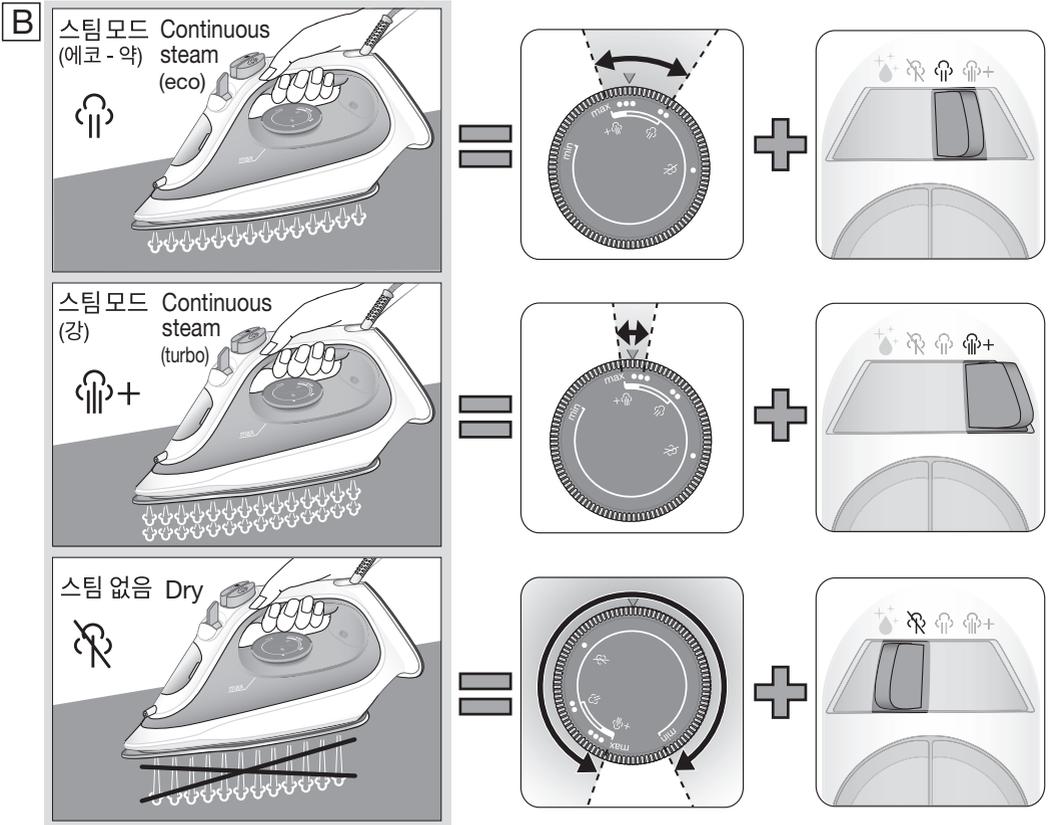


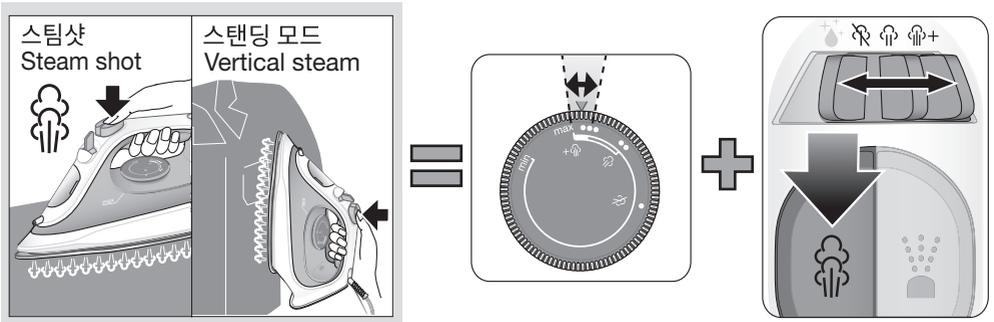

자동 꺼짐 (*일부 모델) Auto-off (certain models only)

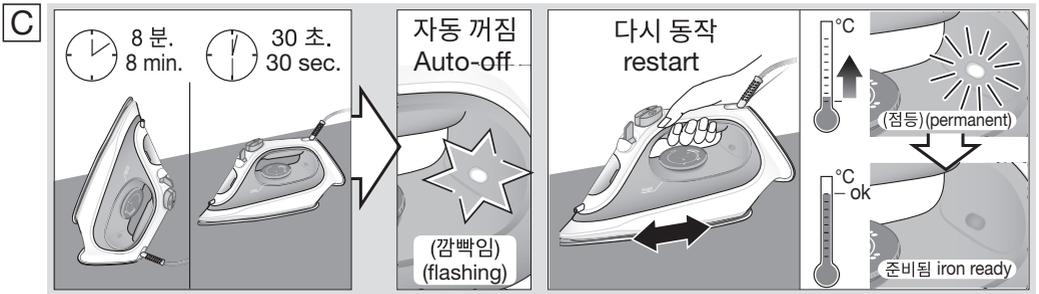

사용후/ 보관 After ironing / storage

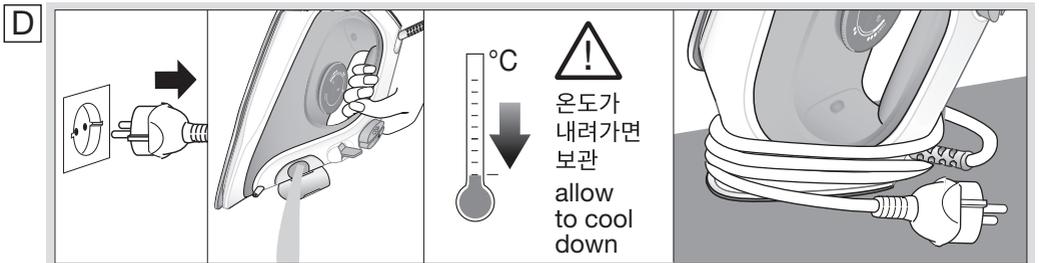

석회제거 Descaling

E

세척 (월2회)
self clean ++
☾

max

세척 방법 Care and Cleaning

F

온도가 내려가면 보관 allow to cool down

한국어 - 주의사항

사용전

제품을 사용하기 전에 본 제품 관련 지침을 주의 깊게 읽어 주십시오.

주의



주의 : 표면이 매우 뜨겁습니다! 전기다리미는 높은 온도와 뜨거운 증기가 함께 발생합니다. 화상을 유발할 수 있으므로 주의하십시오

- 본 제품은 8세 이상의 어린이와 신체적, 감각적 또는 정신적 능력이 떨어지거나 경험이 부족한 사람이 기기 사용하기 위해서는 안전한 방법으로 보호자와 함께 사용가능 합니다.
- 아이들이 본 제품을 가지고 놀아서는 안 됩니다.
- 청소 및 사용자 유지 보수는 감독 없이 어린이가 혼자서 할 수 없습니다. 반드시 보호자의 감독하에 진행하도록 하여 주십시오.
- 작동 및 냉각 중에 기기와 전원 코드는 8세 미만 어린이의 손이 닿지 않는 곳에 보관 해야 합니다.
- 전원 코드가 손상된 경우에는 위험을 피하기 위해 제조업체, 서비스 대리인 또는 이와 유사한 자격을 갖춘 사람이 해당 전원 코드를 교체해야 합니다.
- 물을 채우기 전에 항상 제품의 전원 플러그를 뽑아 주십시오.
- 제품을 안정된 표면 위에 놓고 사용해 주셔야 합니다.
- 다림질을 멈추면 제품의 하단 부분이나 철재로 만들어진 다리미 받침대 위에 정 위치 시켜 보관해 주십시오.
- 본 제품을 세워서 대기할 때 반드시 안정된 표면 위에 놓여 있는지 확인하십시오.
- 본 제품은 전원이 공급이 가능한 상태로 절대로 무인 상태로 두어서는 안 됩니다.
- 제품을 떨어트린 경우, 파손된 흔적이 있거나 내부의 부품 등이 노출된 경우에는 제품을 사용하지 않아야 합니다.
- 정기적으로 코드의 손상 여부를 점검해 주십시오.
- 제품 세척은 관련 부분의 지시 사항을 따라야 합니다.
- 본 제품을 물이나 다른 액체에 담그지 마십시오.
- 소켓에 연결하기 전에, 장치의 하단에 명시된 전압과 전압이 일치하는지, 접지된 소켓을 사용하고 있는지 확인하십시오.
- 연장 코드를 사용할 때는 상태가 양호하고 접지가 연결된 플러그가 있으며 기기의 전원 정격에 부합하는지 확인하여 주십시오.
- 바닥판과 받침대는 화상을 입을 수 있는 매우 높은 온도로 뜨겁습니다. 절대로 만지지 마십시오.
- 질식 위험: 기기는 작은 부품을 포함하고 있습니다. 이러한 작은 부품이 어린이의 손에 닿지 않도록 보관 하고, 삼키거나 하지 않도록 관리하여 주십시오.
- 중요: 모든 포장(비닐류, 스티로폼등)을 어린이가 만지지 않도록 주의해 주십시오.

문제 해결

문제	방법
스팀이 아닌 물이 떨어지는 경우	-약한 스팀 모드 (수)로 선택하거나 스팀을 OFF 합니다. -스팀샷을 여러번 연속해서 누르지 않습니다. -더 높은 온도로 선택합니다. -일부 (☉)표기가 있는 제품만 물떨어짐 방지 기능이 있는 제품입니다. 기능이 없는 경우 약간의 물은 떨어질 수 있습니다.
스팀이 적거나 나오지 않는 경우	-물양을 확인합니다. -막힌 경우 석회제거를 진행합니다.
다리미판으로 석회 가루가 나오는 경우	-석회 제거를 진행합니다.
다리미 판이 뜨겁지 않은 경우	-전원코드를 뽑았다가 꽂습니다. 온도 설정을 «min»에서 «max»로 돌립니다. 이후에 원하는 온도로 설정하여 확인합니다.

품질보증 및 AS

본 제품은 구매일로부터 1년간 품질을 보증합니다.

브라운 주방가전: 위니아에이드 서비스센터

소모품 및 A/S 문의: **080-647-0000**

드롬기코리아(주)는 품목별 소비자 분쟁 해결기준 (공정거래 위원회 고시)에 따라서 아래와 같이 제품에 대한 보증을 실시합니다.

무상 서비스

일반제품을 영업용으로 전환하여 사용할 경우의 보증기간은 반으로 단축 적용됩니다. 드롬기코리아는 품목별 소비자분쟁해결기준 (공정거래위원회 고시)에 따라 아래와 같이 제품에 대한 보증을 실시합니다.

- 1.본 제품은 품질관리 및 검사과정을 거쳐서 생산된 제품입니다. 제품에 따라서 출고전 기능점검 등의 최종 검사 작업을 위하여 제품내 물 등이 남아 있을 수 있습니다.
- 2.제품의 보증기간은 소비자의 구매일로부터 시작됩니다. 따라서 구매 증명자료와 본 사용 설명서를 잘 보관하여 주십시오.
 - 구입일자 확인이 어려운 경우 제조년월로 부터 6개월이 경과된날로부터 보증기간을 가산 합니다.
- 3.품질 보증기간 내에 정상적인 사용상태에서 발생한 성능 및 기능상의 하자에 대해서는 무상으로 수리를 보증합니다. 단 수리가 불가능한 경우 제품을 교환해 드립니다.

유상 서비스

보증기간 이후는 유상서비스로 진행되며, 서비스 신청 시 다음과 같은 경우 무상서비스 기간내라도 요금이 부과될 수 있습니다. 반드시 사용설명서를 읽고 사용해 주십시오.

- 1.기구세척 또는 조정 사용설명서 설치 등의 제품의 고장이 아닌 경우
 - 사용설명 및 분해가 필요하지 않은 간단한 조정, -전원 또는 사용 되는 식수 등의 기온 등 외부환경 문제 시, -제품의 이동, 이사 등으로 발생된 제품의 설치 부실 또는 파손, -소모자재 등의 교환 또는 관련부품의 세척
2. 소비자 과실로 인한 고장의 경우
 - 외부 충격이나 떨어뜨림 등에 의한 고장, 손상 발생 시
 - 당사에서 지정하지 않은 수리서비스 업체 또는 기사 등이 수리하여 고장 또는 사고 발생 시 - 맞지 않는 정격전압 사용 시

English – Safety Precautions

Before use

Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

-  Caution: Hot surfaces! Electric Irons combine high temperatures and hot steam that could lead to burns.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- During operation and cool-down the appliance and its mains cord shall be kept out of reach of children under 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always unplug the station/iron before filling with water.
- The appliance must be used and rested on a flat, stable surface.
- During ironing pauses, place the iron on its heel rest. Ensure that the heel rest is placed on a stable surface.
- The iron must not be left unattended while it is connected to the supply mains.
- The appliance must not be used if it has dropped, if there are visible signs of damage or if it is leaking. Regularly check the cords for damages.
- If you have extremely hard water, we recommend that you use 50 % tap water and 50 % distilled water. Never use distilled water exclusively.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- The cords should never come in contact with hot objects, the soleplate, water and sharp edges.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance and that you are using an earthed socket.
- When using an extension cord watch out that it is in good condition, has a plug with an earth connection and corresponds with the power rating of the appliance (16A).
- The soleplate and the iron rest can reach very high temperatures that could lead to burns. Do not touch them.

- **CHOKING HAZARD:** the appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.
- **Important:** Keep all packaging (plastic bags, polystyrene foam) away from children.

Trouble-shooting guide

Problem	Remedy
Drops coming out of the steam vents	Select steam regulator to pos.  or turn the steam off. Take longer intervals when pressing the steam shot button. Select a higher temperature setting. Only models with  feature the anti-drip function.
Less steam develops or no steam at all	Check water level. Perform self cleaning procedure.
Calcium particles coming through the steam vents	Perform Self Cleaning procedure.
Soleplate is not heating up.	Unplug the iron and plug in again. Rotate the temperature selector from «min» to «max». Then, select the desired temperature.

