

# BRAUN

Coffee Grinder



Type KG701AI

Register your product  
[www.braunhousehold.com](http://www.braunhousehold.com)

KG 7070

# English – Safety Instructions

## Before use

---

**Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.**

## Caution

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its main cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- Do not use any part in the microwave.

Please do not dispose the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.



© Copyright 2022 All rights reserved  
De'Longhi Braun Household GmbH  
Carl-Ulrich-Straße 4  
63263 Neu-Isenburg/Germany

5717748090/09.22 KG 7070 KR  
EN/KR

## 한국어 – 안전 주의 사항


### 제품 사용전에 읽어 주세요.

---

기기를 사용하기 전에 사용자 지침을 주의 깊게 읽고 나중에 참조할 수 있도록 보관하십시오. 모든 포장과 라벨을 제거하고 적절하게 폐기하십시오.


### 주의 사항

- 이 제품은 신체적, 감각적 또는 정신적 능력이 약하거나 경험과 지식이 부족한 사람이 사용시에는 위험할 수 있으므로 제품을 사용에 대한 이해가 있는 보호자의 감독 아래 사용할 수 있습니다.
- 어린이가 제품을 가지고 놀면 안됩니다.
- 이 제품은 어린이가 사용하지 마십시오.
- 어린이는 제품과 주 코드에서 멀리 떨어져 있어야 합니다.
- 공급 코드가 손상된 경우 위험을 방지하기 위해 제조업체, 서비스 대리점 또는 이와 유사한 자격을 갖춘 사람이 교체해야 합니다.
- 제품 보관시에 조립, 분해, 청소 및 보관하기 전에는 항상 스위치를 끄고 전원 플러그를 뽑으십시오.
- 기기를 물이나 기타 액체에 담그지 마십시오.
- 이 기기는 가정용으로 그리고 일반 가정에서의 사용량을 고려하여 설계되었습니다.
- 사용 설명서에 명시된 용도 이외의 용도로 제품을 사용하지 마십시오. 잘못 사용하면 부상을 입을 수 있습니다.
- 처음 사용하기 전에 또는 필요에 따라 관리 및 청소 섹션의 지침에 따라 모든 부품을 청소하십시오.
- 콘센트에 꽂기 전에 사용 중인 전압이 제품 바닥에 표시된 전압과 일치하는지 확인하세요.
- 전자레인지에 어떤 부품도 사용하지 마세요.

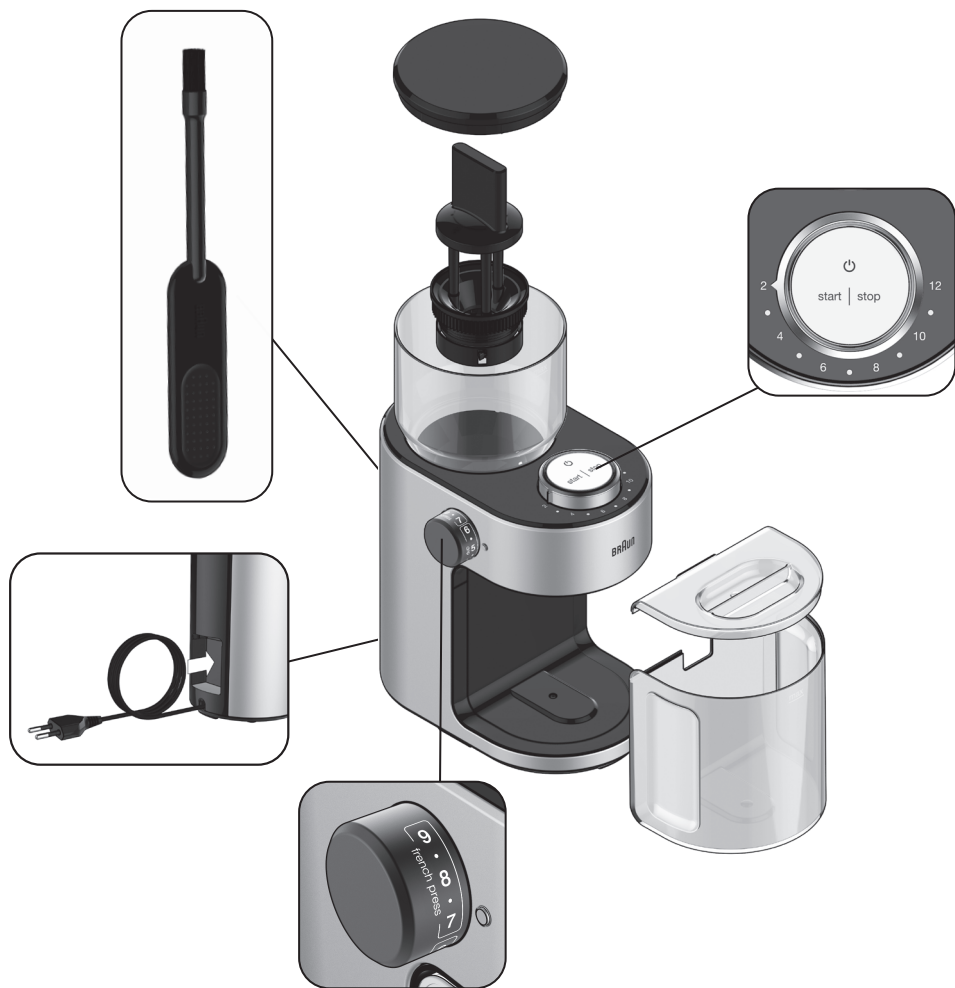


**KR** 원두 그라인더 용도로만 사용하여야 합니다 / **EN** Only intended for coffee beans.


#### **KR** 결합 방법 / **EN** Assembly

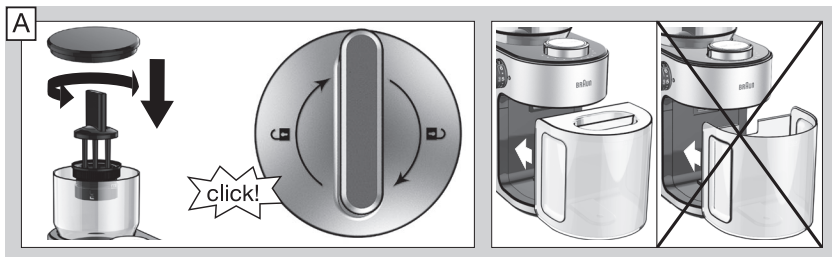

**KR** 사용 방법 / **EN** Grinding coffee beans

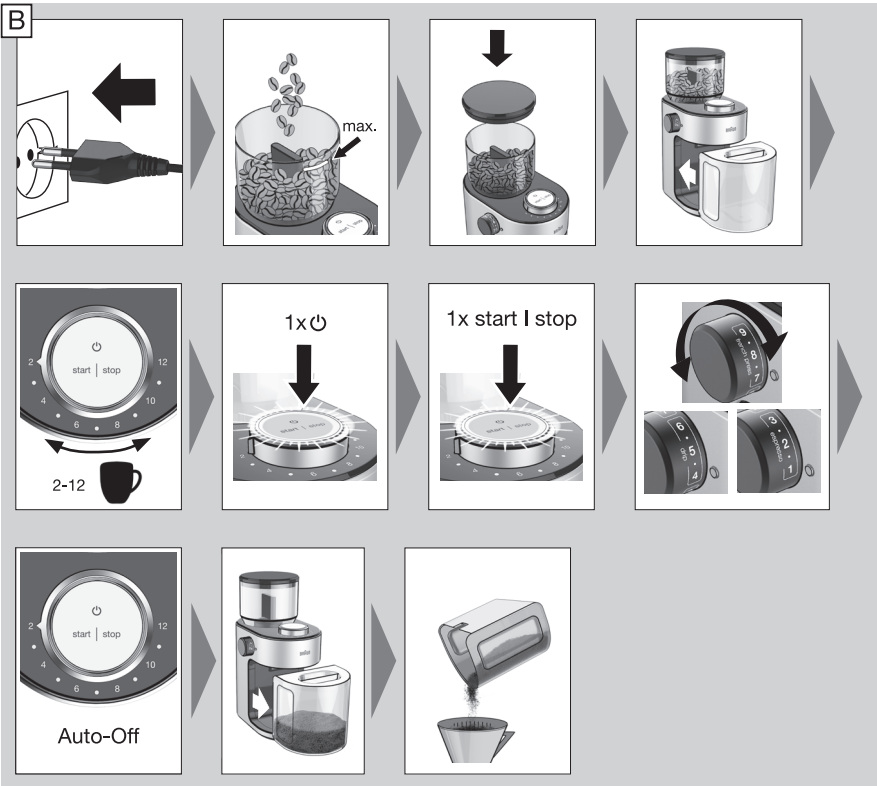

**KR** 세척과 유지관리 / **EN** Care and Cleaning

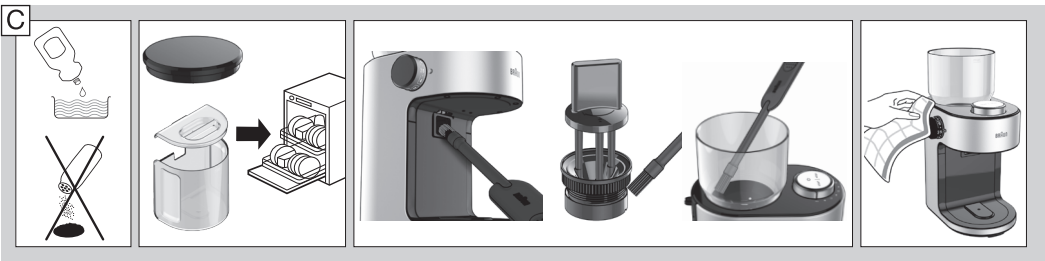

## 품질 보증

본 제품은 구매일로부터 **1년간** 품질을 보증합니다.

드롱기코리아(주)는 품목별 소비자 분쟁 해결기준 (공정거래위원회 고시)에 따라서 아래와 같이 제품에 대한 보증을 실시합니다.

### ■ 무상 서비스

일반제품을 영업용으로 전환하여 사용할 경우의 보증기간은 반으로 단축 적용됩니다. 드롱기코리아는 품목별 소비자분쟁해결기준(공정거래위원회 고시)에 따라 아래와 같이 제품에 대한 보증을 실시합니다.

1. 본 제품은 엄격한 품질관리 및 검사과정을 거쳐서 생산된 제품입니다. 제품에 따라서 출고전 기능점검 등의 최종 검수 작업을 위하여 제품내 물 등이 남아 있을 수 있습니다.
2. 제품의 보증기간은 소비자의 구매일로부터 시작됩니다. 따라서 구매 증빙 자료와 본 사용설명서와 함께 잘 보관하여 주십시오.
  - 구입일자 확인이 어려운 경우 제조년월로 부터 6개월이 경과된 날로 부터 보증기간을 가산 합니다.
3. 품질 보증기간 내에 정상적인 사용상태에서 발생한 성능 및 기능상의 하자에 대해서는 무상으로 수리를 보증합니다. 단 수리가 불가능한 경우 제품을 교환해 드립니다.

### ■ 유상 서비스

보증기간 이후는 유상서비스로 진행되며, 서비스 신청 시 다음과 같은 경우 무상서비스 기간내라도 요금이 부과될 수 있습니다. 반드시 사용설명서를 읽고 사용해 주십시오.

1. 기구세척 또는 조정 사용설명서 설치 등의 제품의 고장이 아닌 경우
  - 사용설명 및 분해가 필요하지 않은 간단한 조정
  - 전원 또는 사용되는 식수 등의 기온 등 외부환경 문제 시
  - 제품의 이동, 이사 등으로 발생한 제품의 설치 부실 또는 파손
  - 소모자재 등의 교환 또는 관련부품의 세척
2. 소비자 과실로 인한 고장의 경우
  - 전기 용량을 틀리게 사용하여 고장이 발생한 경우
  - 당사에서 지정하지 않은 소모품 / 옵션 부품의 사용으로 인한 고장 발생 시
  - 외부 충격이나 떨어뜨림 등에 의한 고장, 손상 발생 시
  - 당사에서 지정하지 않은 수리서비스 업체 또는 기사 등이 수리하여 고장 또는 사고 발생 시
3. 그 밖의 경우
  - 천재지변 (낙뢰, 화재, 염해, 침수 등)에 의한 고장 발생 시
  - 소모성 부품이 수명이 다한 경우

제품의 수명이 다한 후에도 일반 쓰레기와 함께 버리지 마십시오. 환경 규정에 따라 적절한 장소에 폐기해 주십시오.

본 제품은 유럽의 식품 접촉재질 규정ECC1935/2004를 따르고 있습니다.



브라운 홈페이지:

<http://www.braunhousehold.co.kr>

브라운 주방가전: 위니아 에이드 서비스 센터

소모품 및 A/S 문의: 080-647-0000

**KR 문제 해결**

| 증상                                     | 가능한 원인                              | 해결 방법                                                                     |
|----------------------------------------|-------------------------------------|---------------------------------------------------------------------------|
| 작동이 안됩니다.                              | 코드가 빠져 있습니다.                        | 코드를 연결 하십시오.                                                              |
| 작동이 안되고 start/stop 불이 깜빡 입니다.          | 상단 버그라인더가 완전히 결합되지 않았습니다.           | 완전히 결합해 주십시오.                                                             |
|                                        | 커피 가루 용기가 완전히 결합되지 않았습니다.           | 가루 용기의 뚜껑과 용기 결합후 완전히 장착해 주십시오.                                           |
|                                        | 커피 가루 용기의 뚜껑이 결합되지 않았습니다.           | 뚜껑을 올바르게 결합합니다.                                                           |
| 다시 시작되지 않고 start/stop 버튼이 희미하게 들어 옵니다. | 과열 보호 기능이 활성화 되어 과열에 의한 고장을 방지 합니다. | start/stop버튼이 켜질 때까지 기다리십시오.                                              |
|                                        | 과열 퓨즈가 작동됨                          | 과열 보호 기능이 활성화 되어 있는지 확인 하십시오. 플러그를 뽑았다가 다시 연결하십시오. 해결되지 않으면 고객센터로 문의 합니다. |
| 분쇄도 조절 다이얼이 움직이지 않습니다.                 | 분쇄 다이얼은 기기를 작동 하면서 움직여야 합니다.        | 작동 하면서 분쇄도 다이얼을 움직입니다.                                                    |
| 이상한 소리가 납니다.                           | 커피 가루 나오는 곳이 막혔습니다.                 | 가루 나오는 곳을 청소 합니다.                                                         |
| 상부 버를 올바르게 조립할 수 없습니다.                 | 그라인더 부분에 남은 원두가 있습니다.               | 버와 결합부를 청소 합니다.                                                           |

**EN Troubleshooting Guide**

| Problem                                                             | Potential Cause                                                             | Solution                                                                                                                                                          |
|---------------------------------------------------------------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance does not start                                        | Not plugged in                                                              | Plug in                                                                                                                                                           |
| The appliance does not start and the start/stop is flashing         | Removable upper burr is not inserted correctly                              | Insert removable upper burr correctly                                                                                                                             |
|                                                                     | Coffee ground container is not inserted correctly                           | Insert the coffee container including its lid correctly                                                                                                           |
|                                                                     | Lid of coffee ground container is missing                                   | Attach lid correctly to the container                                                                                                                             |
| The appliance does not re-start and the start/stop button is fading | Overheat protection is activated to avoid burning of coffee                 | Wait until the fading of the start/stop button turns off                                                                                                          |
|                                                                     | Thermal protector is activated                                              | Check if overheat protection is active. If not wait some time, unplug and plug in again to restart. If the appliance does not restart contact your service center |
| It is not possible to adjust the grinding setting.                  | The grinding setting was adjusted before the appliance has been switched on | Only adjust the grinding setting when grinding process has already been started (at a standstill, the beans might jam)                                            |
| Appliance sounds different than normal                              | Coffee ground outlet is blocked                                             | Clean up                                                                                                                                                          |
| Upper burr can not be assembled correctly                           | Beans are in the container<br>Burr is dirty                                 | Remove the beans<br>Clean the burr                                                                                                                                |

