

instructions



ELECTRIC HEATING CONVECTOR



Living innovation

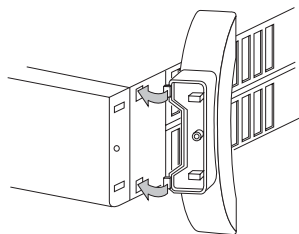


Fig. 1

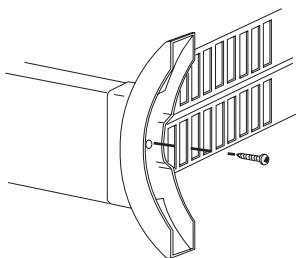


Fig. 2

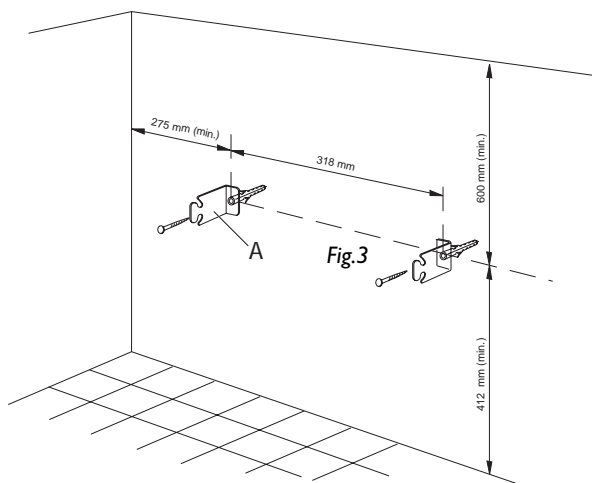


Fig. 3

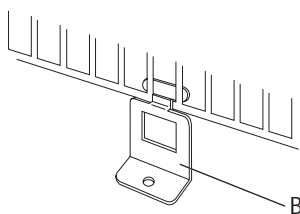


Fig. 4

Thank you for choosing this De'Longhi convector. To get the very best out of your new convector it is advisable to read these instructions before using it. This will ensure that you gain optimum results and use the appliance safely.

Assembling the feet

Fit the feet to the appliance as follows:

- Insert the anchor pins into the slots and turn the foot until it clicks into position (fig. 1)
- Fasten the feet in position using the screw (fig. 2)

Wall mounting

Before drilling into any wall ensure no electrical cables are present in the area.

In order to wall mount your convector please proceed as follows:

1. Fix two brackets "A" following carefully the dimensions as indicated in figure 3. Use a 6 mm masonry drill.
2. Hang the convector on the two brackets fixed to the wall and insert metal brackets "B" into the bottom rear section of the base of the convector as indicated in figure 4, one at each end. Mark the positions for fixing these brackets to the wall. This bracket when fixed retains the base of the convector in a fixed position, preventing removal.
3. Remove the convector heater from the hanging brackets and drill the wall for the dowels and insert them.
4. Fit the convector to the 2 brackets "A". Insert Brackets "B" to the convector base and fix brackets "B" to the pre-drilled. Your convector is now wall mounted.

The appliances should not be installed directly under a wall power socket.

Do not use your heater close to bath and wash basin.

Electrical connection

- Before plugging the appliance into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- This appliance complies with EEC directive 89/336 regarding electromagnetic compatibility.

Operation and use

Turning the appliance on

Insert the plug into the mains socket and switch on.

Models with only one switch

Press the button of the switch down so the red area at the top of the switch is showing.

Models with thermostat only

Turn the appliance on by rotating the thermostat dial clockwise until it can be turned no further.

To turn the appliance off, rotate the thermostat dial fully anti-clockwise and remove the plug from the socket.

Models with two switches and thermostat

Turn the thermostat dial clockwise until it can be turned no further, then press the button of the left switch (minimum power) or both switches (maximum power) so the red area at the top of the switch(es) is showing. We suggest that on days when temperatures are not particularly cold, select minimum output to optimise savings on energy consumption.

Adjusting the thermostat (where applicable)

When the room has reached the desired temperature, turn the thermostat dial slowly in an anti-clockwise direction until you hear a click and the appliance turns off. The thermostat will now keep the temperature in the room constant, turning the heater on and off as appropriate.

Frost protection function (only on models with a thermostat)

Turn the thermostat dial fully anti-clockwise to the ❄️ position. If your convector has one switch, press this on. If your convector has two switches press one or both switches on. When set in this way, the appliance will switch on automatically only if the room temperature falls below 5°C, to prevent freezing at minimum energy consumption.

Model with a fan

This version makes it possible to heat a room even more quickly, thanks to a built-in fan that speeds up the spread of heat and keeps the temperature uniform.

To turn this unit on, proceed as follows:

- Turn the thermostat knob clockwise to the last possible setting.
- To operate the appliance at minimum without the fan, press the button of the left switch (the red area will become visible).
- To operate the appliance at minimum with the fan, press the button of the right switch (the red area will become visible).
- Push both switches in order to get the highest power

In this model, the thermostat can be adjusted just as it is for models without a fan.

Cleaning and maintenance

The convector should not require any maintenance. However before carrying out any cleaning or maintenance, unplug the heater from the mains and wait for it to cool (this should take around 5 minutes). It is sufficient to remove external dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary, remove concentrated areas of dirt with a vacuum cleaner.

Warnings

- Do not use the heater in a bathroom or in the vicinity of bathtubs, wash basins, showers or swimming pools.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- Only use the heater in an upright position.
- Do not block the outlet grilles at the top of the heater or the intake grille at the bottom of the heater.
- The heater must be positioned at least 50cm from furniture or other objects.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- Do not use this appliance in rooms which have a floor area smaller than 4m².
- We recommend that you do not place the heater in a draught as this may adversely affect the appliance's operational efficiency.
- The heater must never be placed immediately under a fixed mains socket.
- **IMPORTANT:** Never for any reason cover the appliance during operation as this could lead to dangerous overheating.
- A safety device intervenes and turns the appliance off in the event of overheating or because the appliance is positioned in a strong draught of air. To reactivate the heater, remove the plug from the mains, allow the appliance to cool (for about 5 mins), remove the cause of the overheating/draught and then plug the appliance back into the mains and turn it back on.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- In order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.



Important: never cover this appliance in any manner whatsoever while it is operating. To do so would cause a dangerous increase in the temperature of the appliance itself.

Electrical connection (U.K. only)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.

If you have a 3-pins plug, do not connect any wire to the "earth" terminal.

