



instructions





DE 320 Dehumidifier

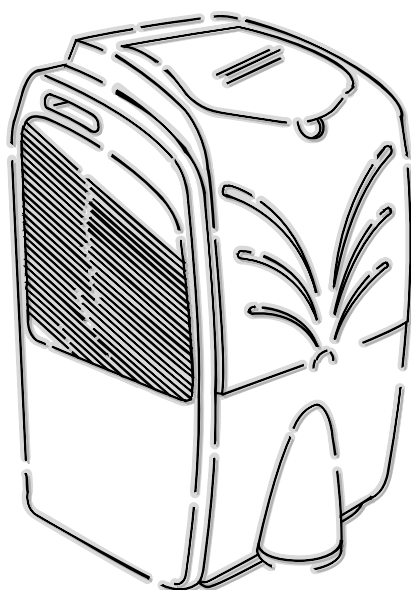

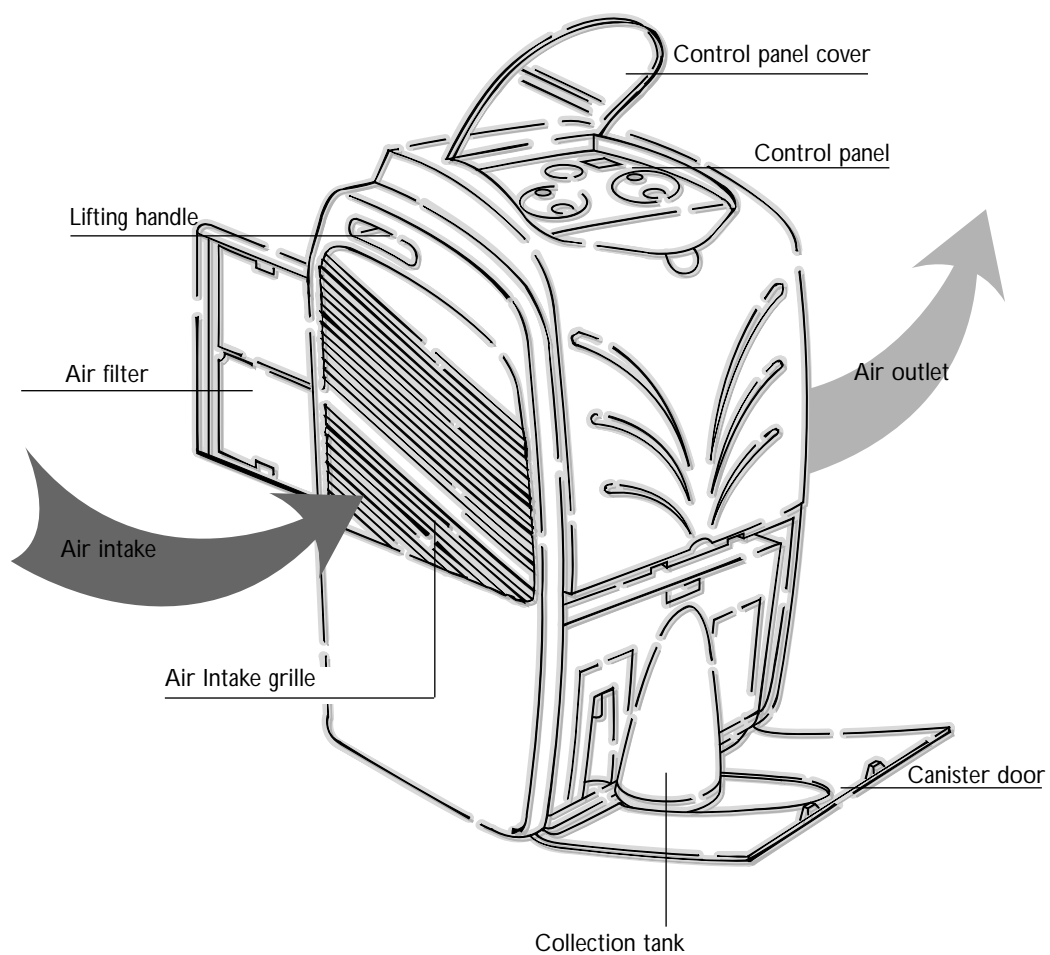Living innovation



	Accessory
	condensate drain hose (2 m.)
	rubber bung

Thank you for choosing this dehumidifier. To get the very best out of your dehumidifier it is advisable to read these instructions before using the appliance. By doing so you will obtain optimum results and maximum safety.

Electrical connections

Before plugging the appliance into the power socket, check that:

- The mains power supply corresponds to the power supply indicated on the rating plate.
- The power socket and electrical circuit are adequate for the appliance.
- The power socket matches the plug. If this is not the case, have the plug replaced by a qualified electrician;
- The power socket must be adequately earthed;
Failure to respect this safety rule absolves the manufacturer from all liability.
This appliance is manufactured in compliance with EEC standard EN 55014 on the suppression of radio interference.
- The cable must be replaced by approved service personnel only.

Installation

1) Positioning

Position your dehumidifier wherever your condensation or damp problem is. A clear area of at least 50cm must be left on the sides of the dehumidifier to ensure adequate ventilation. Do not place the dehumidifier next to a radiator or other heat source as this will reduce its performance.

For ongoing usage we suggest positioning in a hallway or on a landing. Please remember to keep internal doors ajar to allow air circulation.

Before using your dehumidifier for the first time, it should be stood upright for 24hrs prior to use. When moving it from room to room it is advisable to wait an hour before using it again.

2) Water Collection

The water collected (condensate) can be drained in one of two ways:

A) Draining into the tank

The condensate can be drained directly into the tank located inside the appliance (fig. 1).

The tank can be easily removed by pulling on the tank. It also has a handle making it simple to carry and empty.

B) Continuous external draining

If the appliance is to be operated for long periods of time but you are unable to empty the tank, you are recommended to use the continuous drain facility.

- After having removed the rubber bung from the spout, drill the inside of the drain spout using a fine drill bit (8 mm) (Fig. 2).
- To fit the rubber hose to the spout, open the door, remove the tank, pass the drain hose provided through the space between the door (at a slight angle) and the bottom of the appliance, reposition the tank and fit the hose onto the spout (Fig. 3).
- Close the door.
- Make sure that the hose is not higher than the spout, otherwise water will remain in the tank; also check that the hose is not twisted.

N.B: Keep the rubber bung. You will need it to plug the hose or close the spout if you revert to draining into the tank (see point A).

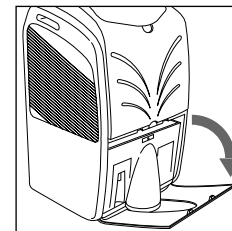


fig. 1

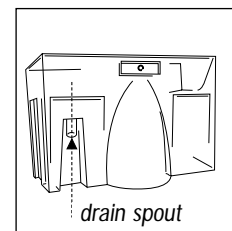


fig. 2

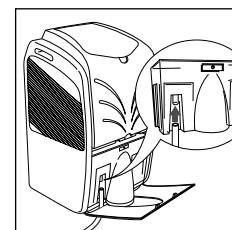


fig. 3

Controls



Tank control system

This dehumidifier is fitted with a special device to ensure correct operation.

A red indicator light on the control panel comes on to warn the user when:

1. the tank is full → empty the tank
2. the tank is missing → replace the tank
3. the tank is in the wrong position → position the tank correctly
4. in continuous drain: the hose is obstructed or placed too high above the drain spout → remove the obstruction.

Once the cause has been eliminated, the light goes out and the appliance resumes operation.



Power indicator light

Indicates that the appliance is connected to the mains.



Dehumidification light

This switches on when the machine is dehumidifying. The light remains on only when the appliance is effectively dehumidifying; if the humidity in the room is already low enough, the light will be off.



Heating light

This switches on when the machine is heating.

Please note that in the combi function, when the desired humidity level has been reached, the appliance switches off even if the desired room temperature has not been reached and the heating light switches off.



Dehumidification standby/low temperature operation light


The light comes on in the following two cases:

- 1) To signal a delay of around 3 minutes in the start-up of the appliance. This is due to a safety device which protects the compressor.
- 2) To signal low temperature operation. When the room temperature is too low, the electronic low temperature operation device is activated. This device allows the appliance to operate by alternating dehumidification cycles and fan only cycles. This is to avoid the formation of ice. For frequent use in cold environments, it is recommended to heat the room at the same time. This allows the dehumidifier to operate in conditions that ensure better performance and faster dehumidification.

LOW/ HIGH Fan speed/heating power lights

With the speed selection button you can choose between the high or low fan speed. The relevant light will switch on.

Control panel

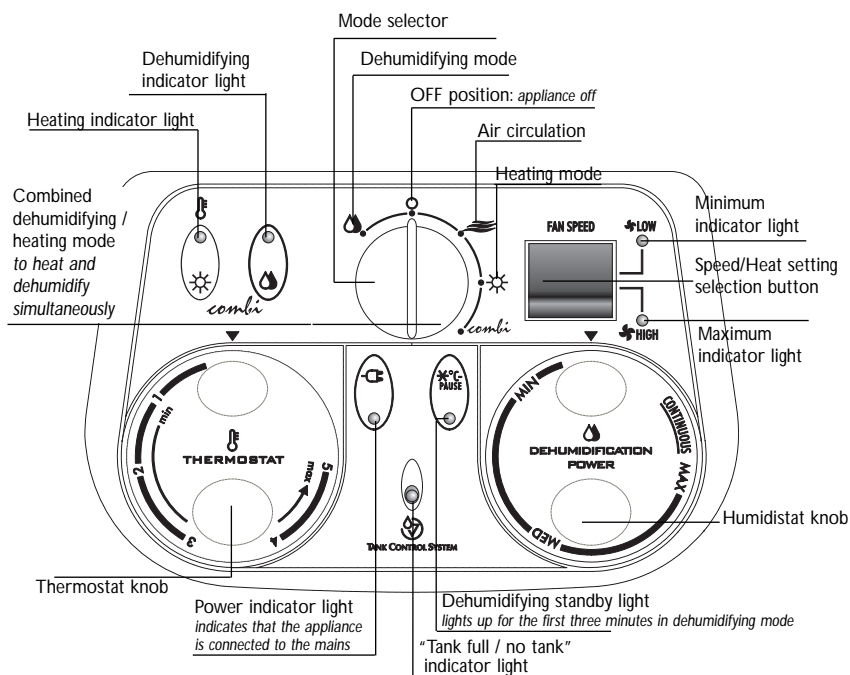

How to dehumidify




- 1) Plug the appliance into a mains socket. The power light comes on to show the appliance is connected to the mains.
- 2) Check that the "tank full/tank " light is off; if not, place the tank in the correct position.
- 3) Turn the the mode selector to dehumidifying.
- 4) Turn the humidistat to the "CONTINUOUS" position. (The dehumidification pause light comes on during the first three minutes (safety device), followed by the dehumidification light). The humidistat knob is used to adjust the dehumidification power and hence the level of humidity (MIN/MED/MAX + CONTINUOUS).

To easily select the right humidity level, we suggest you operate as follows: use on continuous setting until signs of excess moisture (e.g. condensation on windows) decrease - this can take several weeks, slowly turn the humidistat knob anticlockwise until the dehumidifying light goes out. The dehumidifier will then keep the humidity in the room at the selected level automatically.

- 4) Select maximum or minimum fan speed (the relevant light comes on).


Note: When dehumidifying, the appliance not only dehumidifies but also slightly warms the air (1-2°C warmer than room temperature)

How to heat

- 1) Plug the appliance into a mains socket.
- 2) Turn the thermostat knob to position 5.
- 3) Turn the mode selector to the "HEATING" position. The heating light  comes on and the appliance starts up.
- 4) Select the economy ( /1 = 800 W) or maximum ( /2 = 1600 W) heating level on the speed/heat selection button (the corresponding light comes on).

When the temperature in the room has reached the required level, slowly turn the thermostat knob anticlockwise until the heating light goes out. The thermostat will then keep the temperature in the room at the selected level automatically.

Combined mode, (dehumidifying + heating)

- 1) Plug the appliance into a mains socket.
- 2) Check that the "tank full/no tank" warning light is off.
- 3) Turn the humidistat knob to the "CONTINUOUS" position.
- 4) Rotate the mode selector to the "COMBI" position. The () light comes on together with the dehumidification pause light for the first three minutes (safety device), followed by the dehumidification light.
- 5) Select maximum or minimum fan speed (and consequently the electrical power). In COMBI mode, the electrical power used will be 1,990 W or 1,190 W.
- 6) When the humidity in the room has reached the required level, slowly turn back the humidistat knob anticlockwise until the dehumidifying and heating lights go out. The dehumidifier will then keep the humidity at the set level.

Note: The appliance only stops completely when the level of humidity set is reached. If the tank is full, the tankfull warning light comes on and the refrigerant circuit stops however the heater will continue to work.

Note: The quantity of water dissolved in the air drops as the temperature is reduced. For example, at 5°C and with 80% relative humidity, there are less than 5 grams of water vapour in every cubic metre of air. In the event of humidity problems at low temperatures, you are therefore recommended to select the COMBI function.

Maintenance

Always remove the plug from the power socket before performing any cleaning or maintenance operations. For safety reasons, never wash the dehumidifier using a water jet.

Cleaning the cabinet

- Clean the appliance using a damp cloth then dry with a dry cloth.
- Never use petrol, alcohol or solvents to clean the appliance.
- Never spray the appliance with insecticides or similar. These could cause the paint to flake or plastic parts to warp.

Cleaning the permanent air filter

If the filter is dirty, air circulation is compromised and the efficiency of the dehumidifying and air purifying functions decreases. It is therefore good practice to clean the filter at regular intervals. The frequency depends on the duration and conditions of operation. If the unit is used constantly or systematically, you are recommended to clean the filter once a week.

- It is good practice to clean the filter weekly.
- To remove the air filter, extract by pulling it as shown in fig. 4.
- Use a vacuum cleaner to remove dust accumulations from the filter. If the filter is very dirty, wash in warm water and rinse several times. The temperature of the water should not exceed 40°C. After washing the filter, allow to dry completely before putting it back in the appliance.

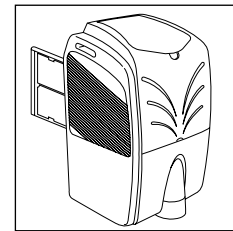


fig. 4

If the appliance is not used for long periods

- Unplug from the mains socket and empty the tank.
- Clean and reposition the filter.
- Cover the appliance so that dust does not build up.

Problem solving

Check the following points before calling your Service Centre

PROBLEM	POSSIBLE CAUSES	SOLUTION
<i>The dehumidifier doesn't work for about 3 minutes from turning on</i>	<ul style="list-style-type: none"> the appliance's safety device has intervened 	<ul style="list-style-type: none"> wait for 3 minutes
<i>The appliance does not work in dehumidifying mode (indicator light off)</i>	<ul style="list-style-type: none"> the appliance is not plugged in there is no current the humidistat is on minimum the tank is full of water the tank is incorrectly positioned 	<ul style="list-style-type: none"> plug into the mains check the power supply turn the humidistat to the max. empty the tank firmly place the tank in the correct position
<i>The appliance operates in dehumidifying mode (light on) but the humidity is not reduced</i>	<ul style="list-style-type: none"> filter clogged the temperature of the home is too low the dehumidifier is too close to a heat source (e.g. a radiator) the compressor is off because the defrosting device has cut in 	<ul style="list-style-type: none"> clean the filter In these conditions we suggest you heat the area to be dehumidified move the dehumidifier away from the heat source. switch the appliance off. Wait 30 minutes then turn on again. If the problem is not solved, call the Technical Service Centre.
<i>The appliance does not operate in heating mode (light off)</i>	<ul style="list-style-type: none"> the appliance is not plugged in there is no current the thermostat is set to minimum 	<ul style="list-style-type: none"> plug into the mains check the power supply set the thermostat to the required position
<i>The appliance operates in heating mode (light on), but does not heat</i>	<ul style="list-style-type: none"> the area is too big there are open windows the electrical resistor protective device has cut in 	<ul style="list-style-type: none"> close the windows to reset, turn the appliance off for several minutes, eliminate the cause of the overheating then turn on again

Technical Characteristics

Power supply voltage	See rating label
Absorbed power dehumidifying only	"
Absorbed power heating ECON:	"
MAX:	"
Maximum absorbed current	"
Defrosting device	yes
Humidistat	yes
Fan speeds	2
Electric resistor overheat protection device	yes
Compressor protection device	yes
Canister control	yes
Air purification filter	yes
Dimensions LxHxD	365x610x375mm
Weight (net)	22 kg
Tank capacity	5,5 litres

Operating limits:	Heating	Dehumidifying
• temperature	Max. 27°C	5° - 32°
• relative humidity	Max. 90%	30 - 90%

Brief note on humidity

Air always contains a certain amount of water in the form of water vapour.

This amount of moisture is commonly known as the humidity.

The capacity of the air to hold water vapour increases with the temperature. This is why in our homes, as soon as the temperature decreases, the vapour contained in the air condenses, as is evident on the colder surfaces in the room, such as the windows, walls etc.

The purpose of a dehumidifier is to remove the excess moisture from the air, to control condensation within the home. Experts have established that the optimum environmental conditions for our well being and to preserve objects are obtained between 40% and 60% relative humidity. Below these levels the air can feel too dry and may cause skin complaints and even static electric shocks.

If temperatures in the home are lower than 10°C for prolonged periods low level heating will be necessary to allow the condensate to evaporate into the air before dehumidification can take place. The air will however be slightly warmed by the dehumidifier as the dry air leaving the dehumidifier is about 1°C higher than normal room temperature.

Important

- Use this appliance only as described in this instruction manual.
As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible caution and common sense should be applied when operating your appliance.
- This appliance is designed to dehumidify domestic rooms and must not be used for other purposes.
- Do not use in the vicinity of baths, showers, sinks, swimming pools, etc.
- In the case that the power cable becomes damaged, this must be substituted only by specialised personnel authorised by the manufacturer.
- It is dangerous to modify or alter the characteristics of the appliance in any way.
- If the appliance requires repair, always contact a Technical Service Centre authorised by the manufacturer. Always insist on original spare parts. Repairs carried out by unauthorised personnel may be dangerous and invalidate the guarantee.
- This appliance must be used exclusively by adults. Do not allow children to play with the appliance.
- The appliance must be connected to an efficient earth installation. Have your electrical circuit checked by a qualified electrician.
- The use of extension leads is not recommended, however if it is necessary then follow carefully the extension lead's instructions, and most importantly ensure that the extension lead is correctly rated in accordance with the heater being used and NEVER overloaded.
- Before cleaning or maintenance operations, always unplug the appliance from the mains.
- Do not move the appliance by pulling the power cable.
- Do not install the appliance in rooms containing gas, oil or sulphur. Do not install near sources of heat.
- Do not use the appliance on inclined surfaces.
- Keep the unit at least 50 cm away from inflammable substances (alcohol etc) or pressurised containers (eg. aerosol cans).
- Do not rest heavy or hot objects on top of the appliance.
- Clean the air filter regularly.
- Always transport the appliance upright or resting on one side. Remember to drain the tank before moving the appliance. Wait at least 1 hour after transporting the appliance before starting it.
- R134a is a refrigerant that complies with the EEC environmental standards; nonetheless, the refrigerant circuit on the machine should not be perforated. At the end of its working life, take the appliance to a recycling centre for disposal of the refrigerant.
- The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers.
- The appliance must be installed in conformity with the relevant national legislation.
- Do not use the appliance outdoors.
- Do not obstruct the air intake or outlet.

Technical assistance

Keep the list of Technical Service Centres and identify the Centre nearest you.

Electrical requirements

Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.


Note: Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

N.B. We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

important: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.


Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.


After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.

Only 13amp replacement fuses which are approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

Warning - this appliance must be earthed

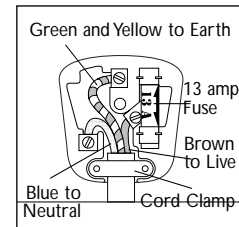



Dehumidifier

Living innovation

5748009800/07.02

