

Fundamental safety warnings



Danger of electric shock!

This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional. Adapters, multiple sockets or extensions should not be used.

To fill or top up with water, turn the ironing system off using the switch, then unplug from the mains.

If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.

Before cleaning or servicing, disconnect the appliance by unplugging from the mains.

During use, the pressurised apertures must not be opened for filling, descaling, rinsing or inspection.

- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.**



Surfaces marked with this symbol become hot during use (the symbol is present in certain models only).

- Never aim the steam at persons or animals.

The user must not leave the iron unattended while connected to the mains power supply;

When power is on or when cooling down, keep the appliance out of reach of children under eight years old.

- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.

- All contact between the hot base and cables must be rigorously avoided.





Important:

- The first time you use the appliance, after removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
Remove the protection from the soleplate.
- Dispose of the plastic bag with care as it represents a hazard for children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use the removable iron rest on an ironing board.
- NEVER use the iron rest on a table. The heat could ruin the surface!
- **"Safe transport"**: certain models are fitted with a locking system which locks the iron in position during transport. **When the iron is locked in position, it must not be used as a carrying handle to transport the appliance!** To position the iron correctly, insert the tip of the soleplate into the housing, rest the iron on the iron rest and move the lock to the locking position  (fig. 1).
To release the iron, move the lock to the release position  and remove the iron from the housing (fig. 2).
- While ironing, you can rest the tip of the soleplate on the heat resistant base above the housing.

The appliance must be used and rested on a stable heat resistant surface.

When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- **NEVER store the iron in a vertical position!**

The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

Designated use

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

Description

(*some models only)

Description of the appliance



(see page 3)

- A** Water reservoir door
- B** Water reservoir filter
- C** Reservoir release lever
- D** Removable water reservoir
- E** Regenerable limescale filter
- F** Limescale filter retainer lever
- G** Hook for steam/cable tube and protective cap for limescale prevention system
- H** Iron rest
- I** Cable tidy

Accessories

- J** Indicator paper to measure water hardness

Control panel

- K*** "Safe Transport" lock/release
- L** "No water" light 
- M** "OK": button, confirms filling of the reservoir (*if held down for at least 5 seconds, confirms filter regeneration or steam generator cleaning*)
- N** Filter replacement light 
- O** Water hardness regulator
- P** ON/OFF and steam regulation dial with



Iron

- Q** Iron on light
- R** Steam button
- S** Thermostat dial
- T*** Continuous steam lock

Preparations for use

What water to use

The appliance works with **normal tap water**.



Important!


Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solution, etc).

Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).













Setting water hardness

This ironing system has a resin limescale filter installed in the water reservoir, allowing you to use ordinary tap water.

The resins reduce water hardness, prolonging the working life of the appliance.

The filter must be replaced when the  light on the appliance control panel comes on. To customise the warning according to the water used, proceed as follows:

- check the hardness of your water using the indicator paper **J** provided:
- dip the paper in the water for 1 second,
- shake to remove excess water;
- wait for 1 minute;
- check the result in the table and use a coin to turn the water hardness regulator **Q** to the position corresponding to your water hardness:

 0 - 9 °F 	
 10 - 18 °F 	
 19 - 36 °F 	
 >36 °F 	

Filling the reservoir



Danger!

Make sure the power cable is unplugged from the mains socket.

- Open the door of the water reservoir and fill (fig. 3). Never exceed the MAX level marked on the reservoir (0.7 l).
- Insert the reservoir (fig. 4) and press until it clicks into place.



Danger!

Make sure the removable reservoir is firmly in place.

If the reservoir is not fully inserted, water may leak from the appliance.

- Plug the appliance into a mains socket.



Please note:

The first time you use the appliance, the steam generator is empty.

When filling the steam generator for the first time, it will take longer to heat up as the air must be eliminated from the steam generator and replaced by the water.

During filling/heating it is normal for the pump to make a noise.

The appliance will also run out of water much more quickly than with subsequent fills.

Steam ironing

- Turn the appliance on by rotating the dial **P** to one of the steam positions. The sector corresponding to the steam selected flashes. Wait until it remains on steadily (steam ready) and light **Q** goes out.
- Press the steam button **R** under the handle to proceed.



Please note:

- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron. You are recommended to ventilate the room.
- The light **Q** goes on and off during ironing according to the temperature of the iron.
This is part of normal operation and not a cause for concern.
- While ironing, it is normal to hear the water fill pump come on and go off.
This is caused by transfer of water from the reservoir to the steam generator.
It is part of normal operation and is not a cause for concern.
- Each time the iron is used (including for the first time) or if you have not used steam for several minutes, press the steam delivery button a number of times away from the ironing board. This will eliminate condensation from the steam circuit.
- **SOME MODELS ONLY:** To discharge steam continuously, move the steam lock **T** backwards.

Adjusting the iron thermostat (N)

Turn the thermostat dial to set the most suitable temperature for the type of fabric to be ironed.



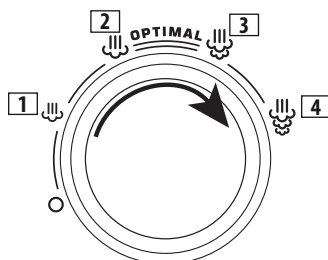
For steam ironing, the temperature must be within the steam sector shown alongside.

Below is a brief guide to help you choose the best temperature for the type of fabric to be ironed.

- Acetate, acrylic, nylon, polyester, rayon
- Silk, wool
- Linen, cotton

Steam regulator


The steam regulator dial **R** enables the quantity of steam to be increased or decreased according to the fabric being ironed.



1. Ideal for garments requiring little steam.
2. Ideal for good quality ironing with maximum energy and water savings.
3. Ideal for top quality ironing with energy and water savings.
4. Ideal for difficult-to-iron garments or creases.

When you turn the iron on, you are recommended to turn the steam regulator dial to the maximum steam position.

Topping up the water in the reservoir

When the water runs out, the  light comes on. The steam light goes off to indicate that the appliance can no longer produce steam.

When this light comes on, proceed as described in the section "Filling the reservoir" and confirm filling by pressing the **OK** button (**M**).

"TURBO" function


Press the steam button **B2** twice to obtain turbo steam for a few seconds.

Dry ironing




To dry iron, turn the thermostat dial on the iron to select the temperature most suitable for the garments to be ironed, then iron without pressing the steam button.

Maintenance

Replacing the limescale filter

When the  light comes on, the filter must be replaced.

To regenerate the filter, proceed as follows:

- Make sure the appliance is turned off, unplugged from the mains and completely cold.
- Press the reservoir release lever **(C)** and **remove the water reservoir**.
- Place the lever **F** in the  position (fig. 6) and remove the limescale filter (fig. 7).
- Position the new filter and place the lever **F** in the  position. Then reattach the tank.
- Plug the appliance into the mains and turn on.
- Hold the **OK** button **(O)** down for at least 5 seconds to confirm the efficiency of the filter. The  light goes off.
- The appliance is ready for use.



Please note:

Limescale filters are available from authorised customer services.

Rinsing the steam generator

To optimise operation, maintain constant steam production over time and save energy, rinse the steam generator with water after every 10 ironing sessions. Proceed as follows:


- Make sure the appliance is turned off, unplugged from the mains and completely cold.
- Remove the water reservoir.
- Turn the protective cap **G** on the side of the appliance clockwise and remove (fig. 9).
- Use a coin or screwdriver to unscrew the steam generator cap (fig. 10).
- Eliminate the water in the steam generator (fig. 11);
- Rest the appliance on its side (fig. 12) and fill with a maximum of 0.7 litres of water using a funnel to avoid the water spilling outside the steam generator.
- Shake the appliance to rinse the entire steam generator, then throw the water away.
- Repeat the rinse procedure.
- Screw the cap back on, making sure it closes the steam generator efficiently.
- Replace the protective cap **G**.
Before resuming ironing, discharge steam into the air for a few seconds to completely eliminate any residues from the internal circuits.



Important!

The appliance will not function without the limescale filter.

If the filter cannot be replaced and you want to continue using the appliance without an efficient limescale filter, proceed as follows:

- Use a coin to turn the water hardness regulator **O** to position **4** corresponding to very hard water (irrespective of the results obtained using the indicator paper).
- When the  light comes on, rinse the steam generator as described above.
- After rinsing, hold the **OK** button down for at least 5 seconds.

Cleaning

- The surface of the soleplate must be kept clean. To clean, just wipe the cold surface with a damp cloth.
- The iron must never be treated with descaling products.

After ironing

After finishing ironing, you should put the ironing system away with the door tightly closed to avoid dust and foreign bodies falling into the reservoir and possibly jeopardising operation of the pump. Place the iron on the iron rest in the secured position and wait for the system to cool down before putting it away. To put the appliance away tidily, fix the steam/cable tube to the hook **G** and wind the power cable around the cable tidy **I**. Store the iron in a dry place.



Please note:

- After ironing, the water remaining in the reservoir need not be drained. However, you are recommended to drain the water if the appliance is left unused for long periods.

Disposal



The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

Net weight: 5,330 Kg.

PROBLEM	CAUSE	SOLUTION
The appliance does not come on.	The appliance is not plugged into a mains socket.	Make sure the appliance is correctly connected and press the iron and steam generator ON buttons.
Steam leaks from the reservoir.	The maximum pressure safety system has tripped.	Turn the appliance off immediately and contact the manufacturer's customer services.
Water leaks from the holes in the bottom of the soleplate.	Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.	Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.
	The ironing system is positioned on an unstable and/or sloping surface.	The iron must be used and rested on a stable surface.
Brown coloured fluid leaks from the soleplate.	Chemical water softeners or additives have been poured into the water reservoir or steam generator.	Never pour products into the water reservoir (see our tips in the quick guide). Clean the soleplate with a damp cloth.
The first time the appliance is turned on, you notice smoke	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times.
The appliance emits an intermittent noise associated with vibrations.	Water is being pumped into the steam generator.	This is completely normal.
The appliance emits a continuous noise associated with vibrations.		Unplug the system from the mains and contact the manufacturer's customer services.