

Important safeguards

- Use this appliance only as described in this instruction manual.
As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating and installing this appliance.
- This appliance is designed for home air conditioning and must not be used for other purposes.
- It is dangerous to modify or alter the characteristics of the appliance in any way.
- The appliance must be installed in conformity with national legislation regulating electrical equipment and installations.
- If the appliance requires repair, contact a Service Centre authorised by the manufacturer only. Repairs carried out by unauthorised personnel may be dangerous.
- This appliance must be used exclusively by adults.
- Never allow the appliance to be used by people (including children) with psychological, physical or sensory impairments or with insufficient experience and knowledge, unless closely supervised and instructed by someone responsible for their safety.
Young children should be supervised to ensure that they do not play with the appliance.
- The appliance must be connected to an efficient earth system.
Have your electrical circuit checked by a qualified electrician.
- Do not use extension cables.
- Before cleaning or maintenance, always unplug the appliance from the mains socket.
- Never unplug the appliance by pulling on the power cable.
- Do not install the appliance in rooms containing gas, oil or sulphur. Do not install near sources of heat.
- Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (eg aerosol cans).
- Do not rest heavy or hot objects on top of the appliance.
- Clean the air filter at least once a week.
- Avoid using heating appliances near the air conditioner.
- Always transport the appliance upright or resting on one side.
Before moving the appliance, empty the internal circuit completely of water.
After moving the appliance, wait at least 1 hour before starting it
- When putting the appliance away, do not cover with plastic bags.
- The materials used for packaging can be recycled.
You are therefore recommended to dispose of them in special differentiated waste collection containers.
- At the end of its working life, consign the appliance to a specialist collection centre.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.

SPECIFIC WARNINGS FOR APPLIANCES WITH R410A* REFRIGERANT GAS

R410A refrigerant gas conforms to EC regulations on the environment.

Avoid perforating the refrigerant circuit of the appliance.

ENVIRONMENTAL INFORMATION: This unit contains fluorinated greenhouse gases covered by the Kyoto Protocol. Maintenance and disposal must be carried out by qualified personnel only (R410A, GWP=1975). * *Verify the type of refrigerant gas used in your appliance on the rating plate.*

DESCRIPTION

- | | | | |
|----|------------------------------|----|---|
| 1 | air outlet grille | 12 | air exhaust hose |
| 2 | control panel | 13 | hose adaptor (2 pieces) |
| 3 | castors | 14 | accessory for wall mounting |
| 4 | handles | 15 | window bracket grille |
| 5 | filter | 16 | window bracket cap |
| 6 | evaporator air intake grille | 17 | window bracket |
| 7 | air exhaust hose housing | 18 | additional window bracket (only on some models) |
| 8 | condenser air intake grille | 19 | 6 screws |
| 9 | power cable | 20 | window outlet |
| 10 | drainage hose | 21 | remote control |
| 11 | wall flange | | |

Preparing for use

ELECTRICAL CONNECTIONS

Before plugging the appliance into the mains socket, check that:

- The outlet's power supply corresponds to the value indicated on the rating label on the back of the appliance;
- The outlet and electrical circuit are adequate for the appliance;
- If this is not the case, you must choose another outlet.

Failure to follow these important safety instructions absolves the manufacturer of all liability.


The power cable must be replaced by a qualified professional only.

The instructions below will enable you to prepare your air conditioner for operation as efficiently as possible. **Before use, make sure the air intake and outlet grilles are unobstructed.**

AIR-CONDITIONING WITHOUT INSTALLATION


Just a few simple steps and your comfort is ensured with your air conditioner:

- Screw one hose adaptor **13** to the hose's end **12**.
- Fit the other hose adaptor **13** in the air exhaust hose housing **7** at the back of the appliance (see fig. A).
- Screw the other end of the hose to the adaptor, that was already fitted to the appliance (see fig. A).

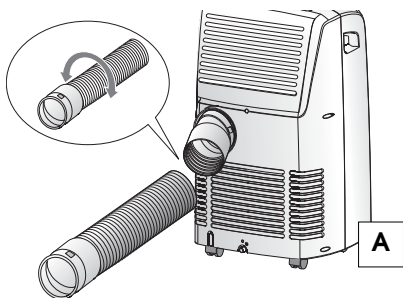


If you have a sash window

- Attach the window bracket grille **15** to the window bracket **17** with the four screws provided **19** (fig. B).

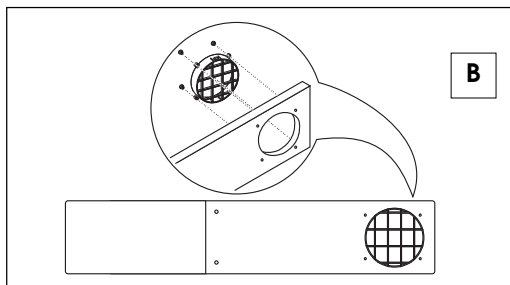

- Open the window.
- Place the window bracket **17** in the window, extending it to fit the width of the window (fig. C).

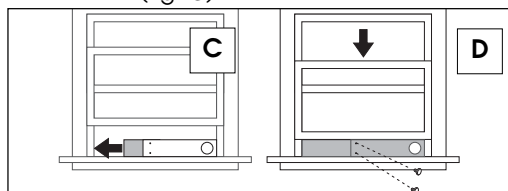

- Once the bracket is extended, it can be locked into its width by tightening the last two screws provided.
- Close the window (fig. D).
- Place the air conditioner near the window. Insert the assembled exhaust hose **12** into the window bracket grille **17** (fig. E). Make sure the air exhaust hose is unobstructed.
- When not used, the window bracket can be closed off with the cap **16** provided.



If you have a very large window


- in order to cover your window aperture, use the additional window bracket without holes extending it to the desired dimension, then fix the bracket by using the pins provided. When extracting the window bracket and joining the two pieces pay attention you do not cover the hole or holes (depending on the model).

Keep the air hoses as short and free of curves as possible to avoid constrictions.


Preparing for use

French window

- Attach the window outlet **20** to the air exhaust hose as shown in fig. F.

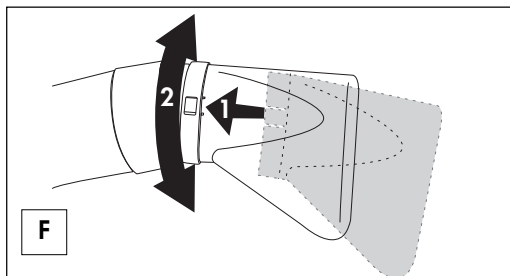


- Open the French window slightly and position the outlet **20** as shown in figure G

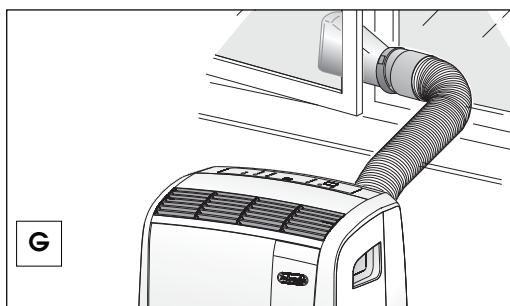

Keep the air hoses as short and free of curves as possible to avoid constrictions.


SEMI-PERMANENT INSTALLATION

If required, your appliance can also be installed semi-permanently (Fig. H).


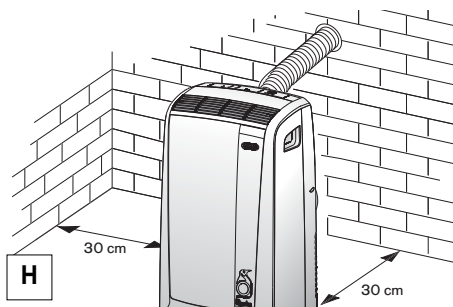


Proceed as follows:

- Drill a hole (ø134mm / 5,27 in.) in an outside wall or through a window pane. Respect the height and dimensions of the hole given in figures M and I.

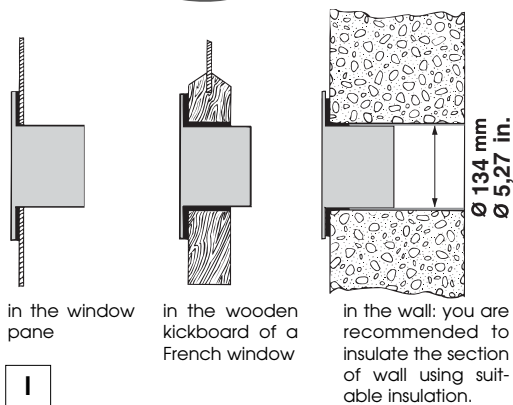

- Fit the wall flange **11** into the hole.
- Screw the hose **12** to the adaptor **13**, that was already fitted to the appliance (fig. A).
- Remove the plastic end of the hose **12** by unscrewing it and in its place screw the wall mounting accessory **14** (fig. L).
- Fit the end of the hose **12** to the wall flange **11** as shown in fig. M.

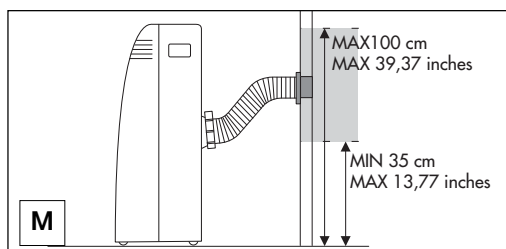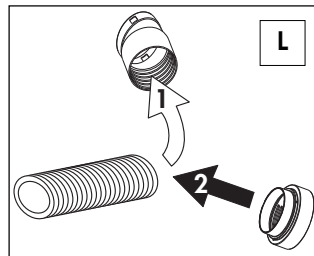


When the hose **12** is not fitted, the hole can be closed with the flange cap **11**.

NOTE: When installing the air conditioner semi-permanently, you should leave a door slightly open (as little as 1 cm) to guarantee correct ventilation.

Control panel

THE CONTROL PANEL

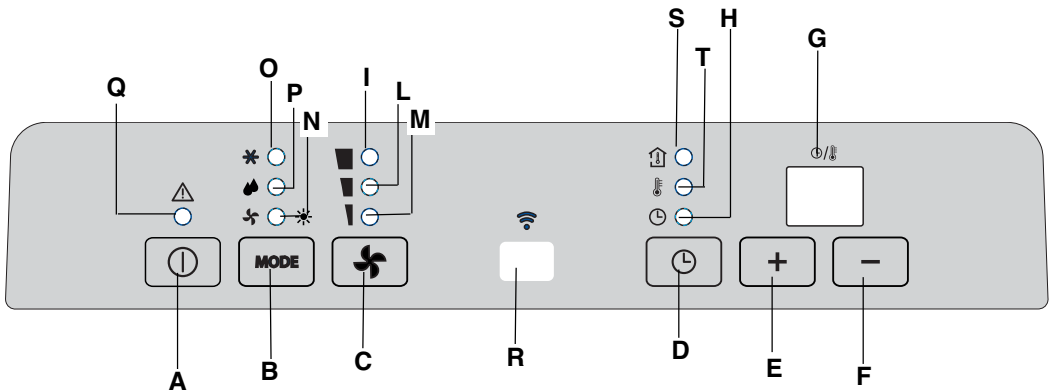

DESCRIPTION OF THE CONTROL PANEL

A ON/OFF button

B MODE selection button

Air conditioning, dehumidifying, fan, heating.

C Fan speed selection button (MAX/MED/MIN)

D Timer button

E Programmed operation increase temperature/time button

F Programmed operation decrease temperature/time button

G Display Displays the temperature values set and the programmed operating time

H Timer in operation indicator light

I/L/M Fan speed lights

N Fan/ Heat mode light

O Air-conditioning mode light

P Dehumidifying mode light


Q Alarm light

R Remote control receiver

S Light: the inner temperature is shown on the display

T Light: the outdoor temperature is shown on the display



Never turn the air conditioner off by unplugging from the outlet. Always press the  button, then wait for a few minutes before unplugging. This allows the appliance to perform a cycle of checks to verify operation.

Operation

TURNING THE APPLIANCE ON

Plug into an outlet.

Two lines appear on the display indicating that the appliance is in stand-by.

Press the **ON/STAND-BY** button (**A**). When turned on, the air conditioner starts operating in the same mode as when it was turned off.

Press the **MODE** button (**B**) until the light corresponding to the desired mode lights up:

Light (**O**): air-conditioning mode

Light (**P**): dehumidifying mode

Light (**N**): fan/heating mode (the light changes colour from yellow to red)

AIR CONDITIONING MODE

Ideal for hot muggy weather when you need to cool and dehumidify the room.

The display shows the inner temperature: the light (**S**) turns on.

To modify the set temperature, push the (**E**) or (**F**) button to reach the desired temperature. The (**T**) light turns on and the (**S**) light turns off. (To change from °F to °C or viceversa, press for few seconds both button **E** and **F**).

After 15 seconds, the inner temperature is shown on the display. The (**S**) light turns on.

You can adjust the temperature only in air conditioning mode.

Then select the fan speed by pressing the FAN button (**C**) until the light corresponding to the required fan speed lights up:

MAX: the air conditioner operates at maximum to achieve the target temperature as rapidly as possible

MED: reduces noise levels while maintaining a comfortable temperature

MIN: for silent operation

The most suitable temperature for the room during the summer varies from 75°F to 81°F (24 to 27°C). You are recommended, however, not to set a temperature much below the outdoor temperature

FAN MODE

Adjust fan speed by pressing the FAN button (**C**) as described for the air-conditioning mode.


Remember that the higher the speed, the more air is filtered. If you select "**MIN**" speed, less air is filtered but the appliance is also less noisy.

Operation

HEATING MODE

This is ideal in spring and autumn when outdoor temperatures are not particularly severe. When using the appliance in this mode, the air hose must be attached.

To set this mode correctly:

- Press the **MODE** button a number of times until the red light  appears.
- Select the target temperature by pressing the + or - button until the corresponding value is displayed.

DEHUMIDIFYING MODE

Ideal for reducing the humidity in a room without lowering or raising the temperature (spring or autumn, damp rooms, rainy spells, etc).

When the dehumidifying mode is selected, the light **(P)** comes on.

At the same time, the "MIN" fan speed light **(M)** comes on. In this mode, other speeds cannot be selected.

PROGRAMMING THE TIMER

The timer can be used to delay appliance start up or shut down. This avoids wasting electricity by optimising operating periods.

How to programme delayed start up

- Plug the appliance into a mains socket and press the ON/OFF button **(A)**, then select the required operating mode and other settings (temperature, fan speed, etc).
- Press the ON/OFF button **(A)** again to place the appliance in standby mode.
- Press the timer button **(D)**. The timer light **"H"** flashes.
- Use the + **(E)** or - **(F)** buttons to set the number of hours delay before the appliance comes on. The time increases or decreases in steps of one hour.

The indicator light **(H)** flashes until the appliance starts up.

You can set the appliance to come on with a delay of up to 12 hours.

To cancel the timer programme, press the timer button **(D)** again.

Light **(H)** stops flashing.

How to programme delayed shut down

- Delayed shut down can be programmed in any operating mode (air conditioning / fan/ dehumidifying).
- Press the timer button **(D)**. The timer light "H" flashes.
- Use the + **(E)** or - **(F)** buttons to set the number of hours delay before the appliance goes off.

The time increases or decreases in steps of one hour.

The light **(H)** flashes until the appliance turns off as programmed.

At the set time, the air conditioner shuts down and remains in standby.


To cancel the timer programme, press the timer button **(D)** again.

Light **(H)** stops flashing.

Using the remote control unit (some models only)


MODELS WITH REMOTE CONTROL

- Point the remote control at the receiver on the air conditioner. The remote control must be no more than 16,4 ft (5 metres) away from the appliance (without obstacles between the remote control and the receiver).
- The remote control must be handled with **extreme care**. Do not drop it or expose it to direct sunlight or sources of heat.

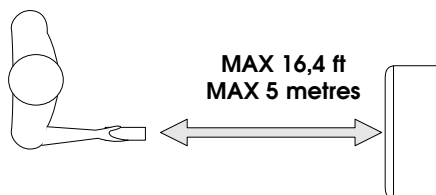

DESCRIPTION OF THE REMOTE CONTROL

- 22) "ON/OFF" button
- 23) Increase /Decrease button for temperature/programmed use
- 24) "MODE" button
- 25) "TIMER" button
- 26) Fan speed selection button (MAX/MED/MIN).
- 27) °F/°C scale button

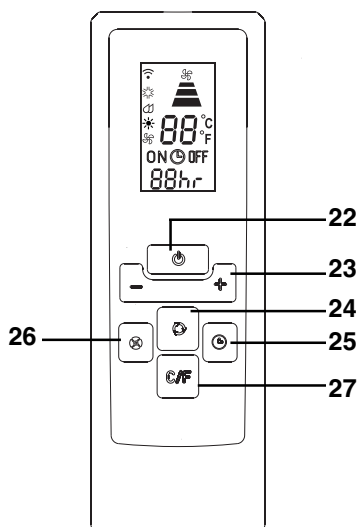

Inserting or replacing the batteries

- Remove the cover on the rear of the remote control;
- Remove the old batteries, if present.
- Correctly insert two new L03 "AAA" 1,5V batteries (see the instructions inside the battery compartment);
- Replace the cover.

If the remote control unit is replaced or discarded, the batteries must be removed and disposed of in accordance with current legislation as they are harmful to the environment. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not dispose of batteries in fire. Batteries may explode or leak.

TURNING THE APPLIANCE ON

Plug the appliance into the mains.

Press the **ON/OFF** button (22) (when turned on, the air conditioner starts operating in the same mode as when it was turned off).

Press the **MODE** button (24) to select the required mode

COOLING

DEHUMIDIFYING

FAN ONLY

HEAT

On the control panel, the light corresponding to the selected mode comes on.

For air conditioning/dehumidifying/fan only/heat settings and programming the timer, see page 19-20.

Tips


To get the best from your air conditioner, follow these recommendations:

- close the windows and doors in the room to be air conditioned.



The only exception is when the appliance is installed through a hole in the wall.

In this case, you are recommended to leave a slight draught through a door or window to guarantee correct ventilation.

- Never use the appliance in very damp rooms (laundries for example).
- Never use the appliance outdoors.

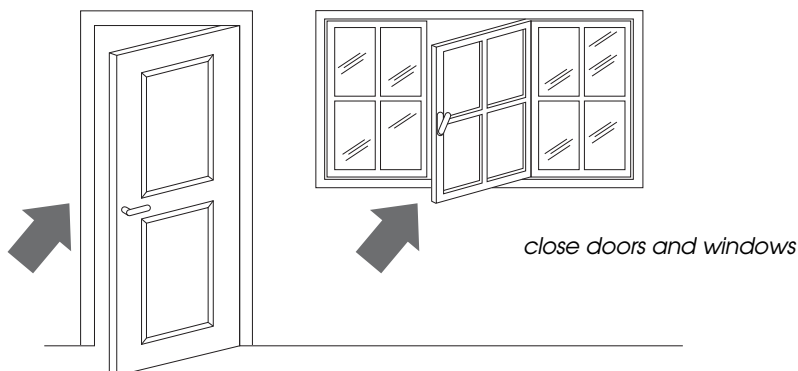

- Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run;
- Never rest objects of any kind on the air conditioner;
- Never obstruct the air intake **6** or outlet **1** grilles;
- Make sure there are no heat sources in the room.

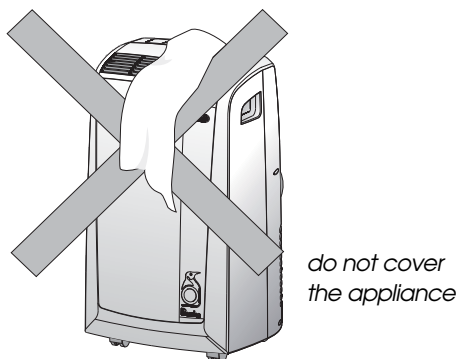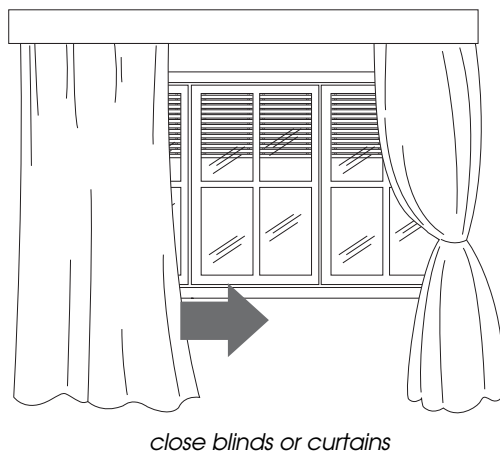

- Make sure the air conditioner is on a **level** floor.

Cleaning

Before cleaning or maintenance, turn the appliance off by pressing the ON/OFF button (A) or in models with remote control unit, by pressing the ON/OFF button [22], then always unplug the appliance from the mains socket.

CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth. For safety reasons, never wash the air conditioner with water.

Precautions


Never use petrol, alcohol or solvents to clean the appliance. Never spray insecticide liquids or similar.

CLEANING THE AIR FILTERS

To keep your air conditioner working efficiently, you should clean the dust filter every week of operation.

The filter is housed in the intake grille.

To clean the filters, remove the filter as shown in figure N.

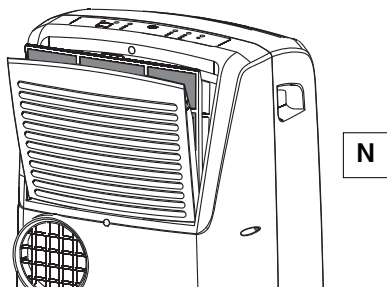

Use a vacuum cleaner to remove the dust collected on the filter.

If it is very dirty, immerse in warm water and rinse a number of times.

The water should never be hotter than 40°C.

After washing, leave the filter to dry.

Put the filter back in its housing.


START OF SEASON CHECKS

Make sure the power cable and plug are undamaged and the earth system is efficient. Follow the installation instructions precisely.

END OF SEASON OPERATIONS

To drain all water from the circuit, remove the cap from the drain hose on the back of the appliance and allow the water to drain out into a basin (figure O). When the appliance is empty, replace the cap.

Clean the filter and dry thoroughly before putting back.

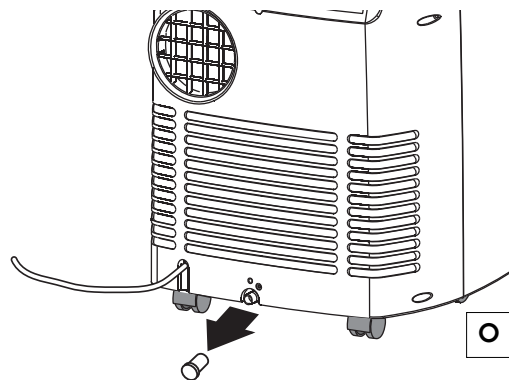

Troubleshooting

NOTE:




NEVER TRANSPORT OR TURN THE APPLIANCE UPSIDE DOWN OR ON ITS SIDE. IF THIS OCCURS, WAIT 6 HOURS BEFORE TURNING THE APPLIANCE ON, 24 HOURS IS RECOMMENDED. (After the unit has been on its side, oil needs to return to the compressor to ensure proper function. Without allowing the unit this time (6-24 hours) The unit may function for only a short time, and then the compressor will break down from lack of oil.)

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
The air conditioning unit does not start.	<ul style="list-style-type: none"> No electricity. It is not plugged into the outlet. The safety device of the plug has tripped. 	<ul style="list-style-type: none"> Wait. Plug into the outlet. Contact your service center.
The air conditioning unit works for a short time only.	<ul style="list-style-type: none"> The air exhaust hose has a constriction. The air exhaust hose is blocked. There are tight bends in the air exhaust hose. 	<ul style="list-style-type: none"> Position the exhaust hose correctly. Check there are no obstacles. Obstructing air discharge. Eliminate the tight bends.
The air conditioner works, but does not cool the room.	<ul style="list-style-type: none"> Window open. There are heat sources in the room (lamps, etc.). The exhaust hose is detached. Air filters clogged. the air conditioner is not powerful enough for the conditions or size of the room 	<ul style="list-style-type: none"> close the window eliminate the heat source connect the exhaust hose clean or replace the filter
Particular odour in the room	<ul style="list-style-type: none"> air purifying filters clogged 	<ul style="list-style-type: none"> clean or replace the filters
The air conditioner does not operate for about 3 minutes after turning it on	<ul style="list-style-type: none"> the safety device has tripped 	<ul style="list-style-type: none"> wait for three minutes
The alarm light Q comes on	<ul style="list-style-type: none"> the tank inside the appliance is full. 	<ul style="list-style-type: none"> empty the tank (see "End of season operations) on page 23).

SELF-DIAGNOSIS

The appliance has a self diagnosis system to identify a number of malfunctions. Error messages are displayed on the appliance display.

<p>IF...IS DISPLAYED,</p>  <p>"Low Temperature"</p> <p>...MEANS: room temperature is too low</p>	<p>IF...IS DISPLAYED,</p>  <p>"High Temperature"</p> <p>...MEANS: room temperature is too high</p>	<p>IF...IS DISPLAYED,</p>  <p>"Probe Failure" (sensor damaged)</p> <p>...MEANS: contact your local customer service</p>
---	---	---

Technical specifications

TECHNICAL SPECIFICATION

Power supply voltage	see rating label
Max. absorbed power during air conditioning	"
Refrigerant	"
Cooling capacity	"

LIMIT CONDITIONS	
Room temperature for air conditioning	21 ÷ 35°C
Room temperature for heating	10 ÷ 25°C

Transport, filling, cleaning, recovery and disposal of refrigerant should be performed by a technical service centre appointed by the manufacturer only.
The appliance should be disposed of by a specialist centre appointed by the manufacturer only.